



Catalog

Softstarters

Type PSR, PSE, PST and PSTB

Power and productivity
for a better world™



Efficient PSE Range – World's first compact softstarter with Torque control

The latest addition to the ABB softstarter family is the efficient PSE range. This softstarter has been equipped with all the most important features making it a very efficient choice. During the development process, great focus has been put into making sure that both the softstarter and the process are even more reliable. Further more, the softstarter has been equipped with built-in by-pass to reduce the wiring and a back-lit display to provide easy set-up and monitoring.

The complete range of Softstarters

The ABB softstarter portfolio now consists of 3 different ranges making it possible to find a suitable softstarter for almost all possible applications and motor sizes all the way up to 1800A. The softstarter family consists of the Compact PSR, the Efficient PSE and the Advanced PST(B) range.



Contents

News.....	2
Contents	3
Softstarters	4
Applications	6
PSR - The compact range	
Description.....	8
Overview	9
Ordering details.....	10
Accessories.....	11
Technical data	12
PSE - The efficient range	
Description.....	14
Overview	16
Ordering details.....	18
Accessories.....	20
Technical data	21
PST(B) - The advanced range	
Description.....	24
Overview	26
Ordering details.....	28
Accessories.....	32
Technical data	33
FBP Field Bus Plug	
DeviceNET, MODBUS-RTU and CANopen	38
Profibus DP	40
Wall mounting instructions	42
Dimensions	43
Circuit diagrams	46
prosoft (selection tool)	49
Certifications and approvals	50

Softstarters

From the moment the first electrical motors were developed, engineers have been searching for a way to avoid electrical and mechanical problems that usually occur when starting the motor. These problems include high inrush current and current spikes as well as excessive mechanical wear. One traditional way to avoid this is to use a star delta starter. This starting method in many applications is insufficient, as problems with current spikes and torque peaks will remain. In addition, it does not provide any way to perform a soft stop. A softstarter on the other hand will provide far better performance during the start and also the possibility to soft stop the motor.

ABB has been producing softstarters since the beginning of the 1980's. The valuable experience gained since the early 80's has been incorporated into the design of today's product ranges. Matching modern power electronics with smart circuitry and software, the ABB softstarters offer superior control of the current and voltage during motor start-up and stop, in addition to several state of the art design features.

The solution to both mechanical and electrical problems


AC motors, "the workhorse of the industry", are used to drive fans, crushers, agitators, pumps, conveyors, etc. Depending on how it is installed, too often unnecessary and unwanted torque

and current peaks are an everyday reality in production plants all over the world, causing damage in several ways. Among them are:

- Electrical problems due to voltage and current transients arising from Direct-On-Line or Star-Delta starts. Such transients may overload the local supply network and cause unacceptable voltage variations that interfere with other electrical equipment connected to the network.
- Mechanical problems that address the entire drive chain, from motor to driven equipment, causing a big need for service and repair as well as unwanted down time.
- Operational problems, such as damage to products on conveyor belts.
- Water hammering and pressure surges in pipe systems when starting and stopping pumps.

The financial consequences are considerable; every technical problem and every breakdown costs money in terms of repairs as well as lost production.

The easy solution to all of these problems is to install an ABB Softstarter type PSR, PSE or PST(B). With ABB Softstarters, it is possible to start and stop smoothly while keeping mechanical and electrical stresses to a minimum.

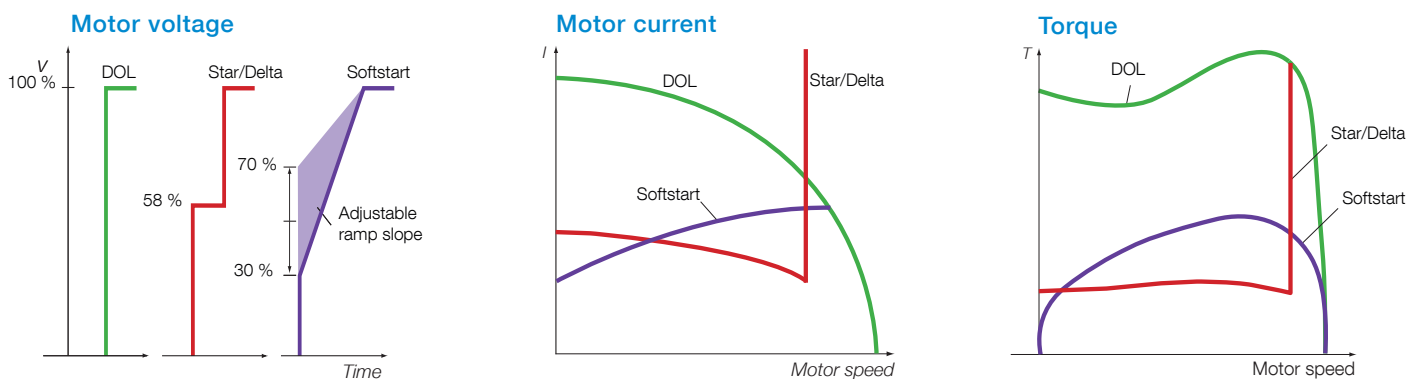

Graphs showing the basic differences between direct-on-line starting (DOL), star-delta starting and soft starting in terms of the motor voltage (V), motor current (I) and motor torque (T).

Softstarters

ABB softstarters – The complete range

ABB offers three different ranges of softstarters to cover every customer need for solutions for motor sizes up to 1800 A. This page describes the main characteristics of the different softstarter ranges

PSR – The compact range

The PSR softstarter is the most compact of all the softstarter ranges, thereby making it possible to design compact starting equipment. The system concept with Manual Motor Starters and the PSR provides a far more compact starting solution than for instance a star delta starter.

The built-in by-pass reduces the energy loss and makes the connection easier. With only three potentiometers, the set-up couldn't be any easier. Still, the optimized ramping characteristics will ensure a very smooth start and stop for all applications.

PSE – The efficient range

The PSE softstarter is the world's first compact softstarter with both built-in electronic overload for motor protection and torque control for an excellent control of pumps. The compact design with the most important functionality integrated provides a very efficient starting solution.

The illuminated language neutral display and the four button keypad make it easy to take advantage of all the advanced functionality in the softstarter. The display will also provide all the necessary information both during ramping and continuous operation.

PST(B) – The advanced range

The PST(B) softstarter is the most advanced softstarter in the range with almost all imaginable functionality included. All the advanced protections for the motor, the softstarter and the load ensure a trouble free operation. Pre-warnings even allow problems to be detected before the motor needs to be stopped and thereby avoiding unnecessary downtime.

The torque control function has been developed and tested together with well known pump manufacturers to ensure the best possible start/stop of pumps without water hammering and pressure surges.

With the full text LCD display in your own language, pre-programmed application settings and event logging, it couldn't be easier to set-up and operate.


By using the ABB FieldBusPlug, you can decide at any time which bus protocol to use. The fieldbus system will allow you to set-up, control and monitor the softstarter.

PSR	PSE	PST(B)	• Standard	O Optional	– Not available
•	•	• 1)	Built-in by-pass	1) on PSTB	
–	–	•	Inside delta connection		
–	•	O	Coated PCBs		
–	•	•	Display and keypad		
–	•	•	Torque control		
–	•	•	Settable current limit function		
–	•	•	Electronic motor overload protection		
–	–	•	PTC input for motor protection		
–	–	•	Phase imbalance protection		
–	–	•	Phase reversal protection		
–	•	•	Locked rotor protection		
–	•	•	Thyristor overtemperature protection		
–	•	•	Underload protection		
–	–	•	Programmable warning functions		
–	•	•	Analog output		
O	O	•	FieldBus communication		
–	O	•	Event log		
–	O	O	External keypad		

Applications

Pumps

Water is the world's most important resource and water facilities can be found all over the world. Examples of water applications are freshwater and wastewater systems, circulating water for heating or cooling and irrigation.

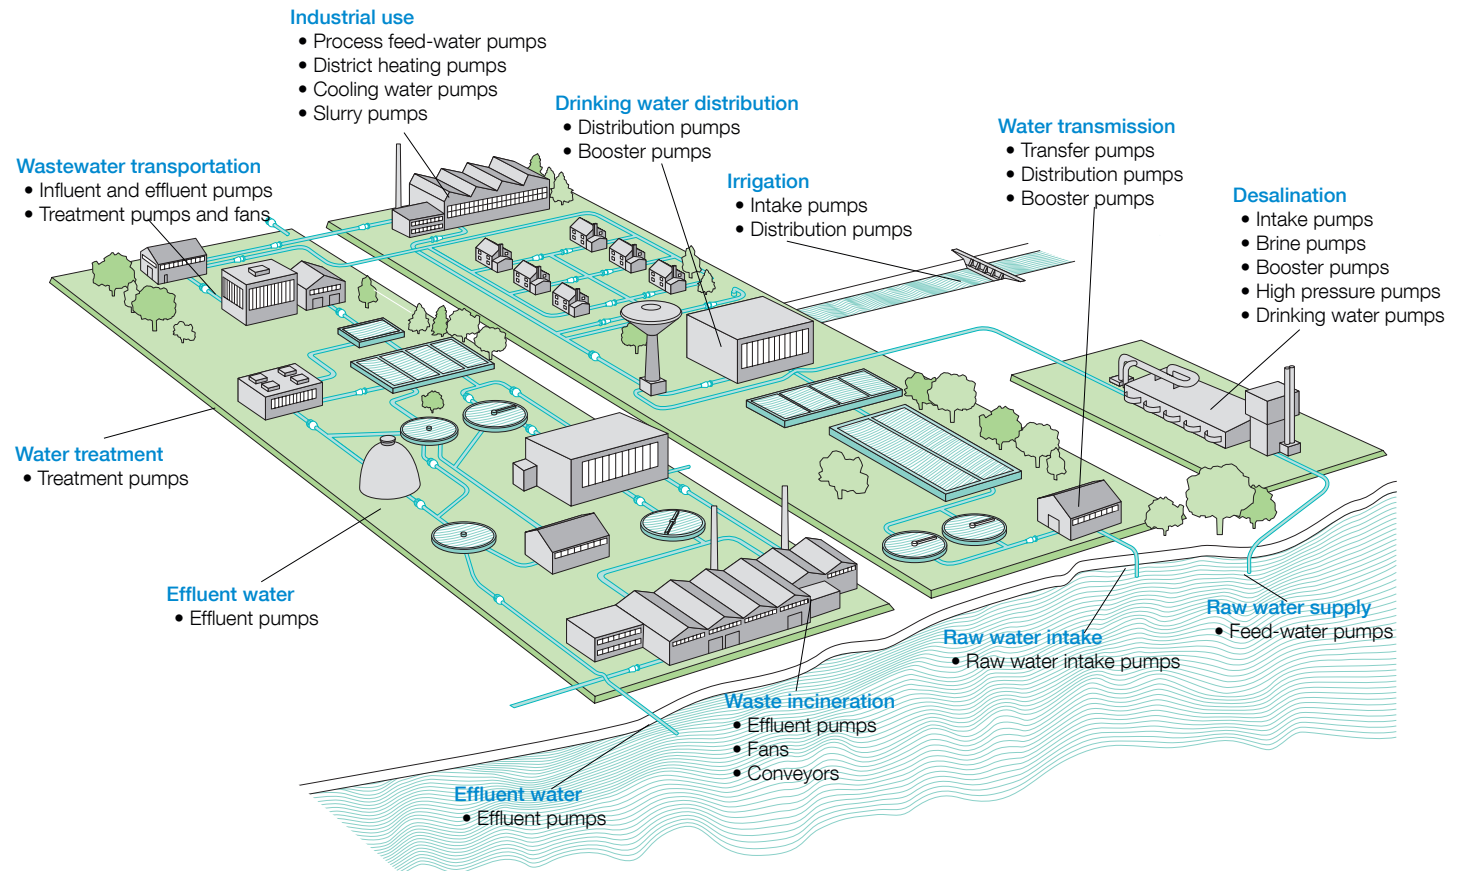

Common questions:

- How to avoid voltage drops on the network when starting?
- ABB softstarter will reduce the starting current and thereby avoid the voltage drops.
- How to avoid water hammering when stopping?
- Use our softstarters equipped with an optimized stop ramp or even better with torque control.
- How to ensure high reliability in harsh environments?
- Use our softstarters equipped with coated circuit boards to better withstand those environments.
- How to protect my pumping equipment in the best possible way?
- Use ABB softstarters equipped with our special designed protections such as overload, underload, and locked rotor protection.

Applications

Fans



Common questions:

- How to avoid extended voltage drops due to long starting time?
- Use an ABB softstarter equipped with current limit to keep control of the starting current.
- How to extend the life of the driving belts?
- Our softstarters will reduce the mechanical stress during start, thus avoiding slipping belts.
- How to ensure the operation of the fan?
- A softstarter with underload protection will detect broken belts, making the operator immediately aware of the problem.

Compressors



Common questions:

- How to ensure a long life of the compressor?
- Using a softstarter for starting will reduce the accelerating torque, thereby minimizing the mechanical stress.
- How to build a compact compressor unit?
- Using a compact softstarter like PSR or PSE will allow a much more compact starting equipment than for instance a star delta starter.

Conveyor belts



Common questions:

- How to reduce the need for service and repair of the conveyor belt?
- A softstarter from ABB will cause minimal mechanical stress on the conveyor belt.
- How to avoid that the conveyor belt is running in the wrong direction?
- Use a softstarter with phase reversal protection.
- How to improve the efficiency of the conveyor belt?
- Using softstarters with high and low current warnings allows you to load on and off the conveyor belt.
- How to ensure a successful start in high inertia loads?
- A softstarter with kick start function will provide sufficient torque to be able to overcome the initial high friction from a temporarily jammed belt.

PSR – The compact range

Description



Product description

- Wide rated operational voltage 208 – 600 V
- Rated control supply voltage 24 V DC or 100 – 240 V AC
- Rated operational current 3 – 105 A
- Wide ambient temperature range, -25 to +60 °C (-13 to 140 °F)
- Built-in by-pass on all sizes, saving energy and reducing installation time
- Potentiometer settings
- Run signal relay on all devices
- TOR signal relay on PSR25 ... PSR105
- Optional fieldbus communication using Profibus, Modbus, Devicenet or CANopen
- DIN rail mounting on PSR3 ... PSR45
- Screw mounting on all sizes
- Connection kits for easy connection with ABB manual motor starters
- Sophisticated algorithm eliminating the DC-component and thereby providing excellent starting performance.

Settings

- ① Start = 1 ... 20 sec
Stop = 0 ... 20 sec - including the step down voltage.
Stop ramp 10 sec -> Step down 80% (20% reduction)
- ② Step down = 2% reduction for each second increased stop ramp
Stop ramp 10 sec -> Step down 80% (20% reduction)
- ③ U_{ini} = 40 ... 70% results in End voltage = 30 ... 60%

The PSR range is the most compact of all the ABB softstarter ranges, thereby making it possible to fit many devices into the same enclosure. The system concept with Manual Motor Starters provides a far more compact starting solution than for example a star delta starter.

Flexible mounting

PSR softstarters from 3 to 45 A are possible to mount on a din rail, ensuring quick and easy mounting. Naturally, all sizes can be screw mounted.

Few settings

The set-up of the PSR is easily done and confirmed using the three clearly marked potentiometers on the front.

Built-in by-pass for energy saving



The built-in by-pass on all sizes does not only save energy; it will also ensure the most compact ABB softstarter design and reduce the installation time.

Suitable for stopping pumps

Even without using torque control, the PSR range is designed to reduce water hammering and will allow a superior stop compared to the direct stop resulting from a star delta starter or a DOL starter. See the special designed stop ramp with step down voltage below.

System concept with manual motor starters

All PSR softstarter sizes can easily be connected to the corresponding manual motor starters from ABB, using the special designed connection kits. This will both make the mounting and the connection easier and will provide a very compact starting solution containing short circuit and thermal protection, isolation function and softstarter - everything that you need.

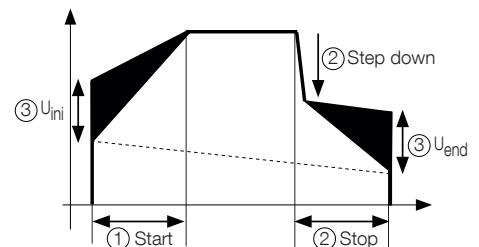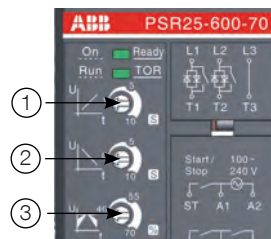

PSR – The compact range

Overview



PSR3 ... PSR16

PSR25 ... PSR30

PSR37 ... PSR45

PSR60 ... PSR105

Normal start In-line connected	Softstarter													
	PSR3	PSR6	PSR9	PSR12	PSR16	PSR25	PSR30	PSR37	PSR45	PSR60	PSR72	PSR85	PSR105	
	(480 V) hp	2	3	5	7.5	10	15	20	25	30	40	50	60	75
	(600 V) hp	2	5	7.5	10	10	20	25	30	40	50	60	75	100
	UL/CSA, Max FLA	3.4	6.1	9	11	15.2	24.2	28	34	46.2	59.4	68	80	104
Using manual motor starter, type 1 coordination will be achieved	Manual motor starter (5 kA/600 V, 40 °C)													
	MS132						MS450		MS495			—		
Using J fuses, type 1 coordination will be achieved	J type fuse protection (85 kA)													
	5 A	10 A	15 A	15 A	25 A	40 A	45 A	50 A	80 A	100 A	110 A	125 A	175 A	
	35 A	35 A	35 A	35 A	35 A	60 A	60 A	90 A	90 A	110 A	125 A	150 A	200 A	
	175 % rating													
	Max rating													
Minimum enclosure size ¹⁾	254 x 204 x 153 mm / 10 x 8 x 6 in					305 x 254 x 204 mm / 12 x 10 x 8 in				610 x 407 x 204 mm / 24 x 16 x 8 in				
Fusible disconnect switch for the above J fuses	Fusible disconnect switch													
	OS30					OS60			OS100		OS200			
Overload protection is used to protect the motor from over heating	Thermal overload relay													
	TF42DU								TA75DU			TA110DU		
The line contactor is not required for the softstarter itself but often used to open if OL trips	Line contactor													
	AF9			AF12	AF16	AF26	AF30	AF50		AF63	AF75	AF95	AF110	
Using by-pass will reduce the power loss and allow more starts per hour	By-pass													
	Built-in													

¹⁾ Enclosure that has two latching points minimum. For use in pollution degree 2 environment.

PSR – The compact range

Ordering details



PSR3 ... PSR105

Rated operational voltage U_e , 208-600 V AC

Rated control supply voltage, U_s , 100 - 240 V AC



PSR3 ... PSR16



PSR25 ... PSR30



PSR37 ... PSR45



PSR60 ... PSR105

230 V kW	400 V kW	500 V kW	208 V hp	230 V hp	480 V hp	600 V hp	UL/CSA Max rated operational current I_e A	Part number	Weight kg (lb)
0.75	1.5	2.2	0.5	0.75	2	2	3.4	PSR3-600-70	0.450 (0.99)
1.5	3	4	1	1.5	3	5	6.1	PSR6-600-70	0.450 (0.99)
2.2	4	4	2	2	5	7.5	9	PSR9-600-70	0.450 (0.99)
3	5.5	5.5	3	3	7.5	10	11	PSR12-600-70	0.450 (0.99)
4	7.5	7.5	3	5	10	10	15.2	PSR16-600-70	0.450 (0.99)
5.5	11	15	7.5	7.5	15	20	24.2	PSR25-600-70	0.650 (1.43)
7.5	15	18.5	7.5	10	20	25	28	PSR30-600-70	0.650 (1.43)
7.5	18.5	22	10	10	25	30	34	PSR37-600-70	1.000 (2.20)
11	22	30	15	15	30	40	46.2	PSR45-600-70	1.000 (2.20)
15	30	37	20	20	40	50	59.4	PSR60-600-70	2.200 (4.85)
22	37	45	20	25	50	60	68	PSR72-600-70	2.270 (5.00)
22	45	55	25	30	60	75	80	PSR85-600-70	2.270 (5.00)
30	55	55	30	40	75	100	104	PSR105-600-70	2.270 (5.00)

Rated operational voltage U_e , 208-600 V AC

Rated control supply voltage, U_s , 24 V DC

230 V kW	400 V kW	500 V kW	208 V hp	230 V hp	480 V hp	600 V hp	UL/CSA Max rated operational current I_e A	Part number	Weight kg (lb)
0.75	1.5	2.2	0.5	0.75	2	2	3.4	PSR3-600-81	0.450 (0.99)
1.5	3	4	1	1.5	3	5	6.1	PSR6-600-81	0.450 (0.99)
2.2	4	4	2	2	5	7.5	9	PSR9-600-81	0.450 (0.99)
3	5.5	5.5	3	3	7.5	10	11	PSR12-600-81	0.450 (0.99)
4	7.5	7.5	3	5	10	10	15.2	PSR16-600-81	0.450 (0.99)
5.5	11	15	7.5	7.5	15	20	24.2	PSR25-600-81	0.650 (1.43)
7.5	15	18.5	7.5	10	20	25	28	PSR30-600-81	0.650 (1.43)
7.5	18.5	22	10	10	25	30	34	PSR37-600-81	1.000 (2.20)
11	22	30	15	15	30	40	46.2	PSR45-600-81	1.000 (2.20)
15	30	37	20	20	40	50	59.4	PSR60-600-81	2.200 (4.85)
22	37	45	20	25	50	60	68	PSR72-600-81	2.270 (5.00)
22	45	55	25	30	60	75	80	PSR85-600-81	2.270 (5.00)
30	55	55	30	40	75	100	104	PSR105-600-81	2.270 (5.00)

PSR – The compact range

Accessories



Connection kit

For softstarter type	Part number	Pack ^{ing} piece	Weight kg (lb) 1 piece
PSR3...PSR16 with MS116	PSR16-MS116	1	0.030 (0.07)
PSR25...PSR30 with MS132	PSR30-MS132	1	0.030 (0.07)
PSR37...PSR45 with MS450	PSR45-MS450	1	0.030 (0.07)
PSR60...PSR105 with MS495	PSR105-MS495	1	0.050 (0.11)

Fan

For softstarter type	Part number	Pack ^{ing} piece	Weight kg (lb) 1 piece
PSR3...PSR45	PSR-FAN	1	0.010 (0.02)
PSR60...PSR105	PSR-FAN 60-105 A	1	0.013 (0.03)

Terminal enlargements


For softstarter type	Part number	Pack ^{ing} piece	Weight kg (lb) 1 piece
PSR60...105 Wire range mm2 1x10...50, 2x10...25	PSLW-72	1	0.150 (0.33)

FieldBus plug connection accessory

For softstarter type	Part number	Pack ^{ing} piece	Weight kg (lb) 1 piece
The same accessory for all sizes	PS-FBPA	1	0.060 (0.13)

ABB Field Bus Plug suitable for all sizes. See page 38-41

Connection kit

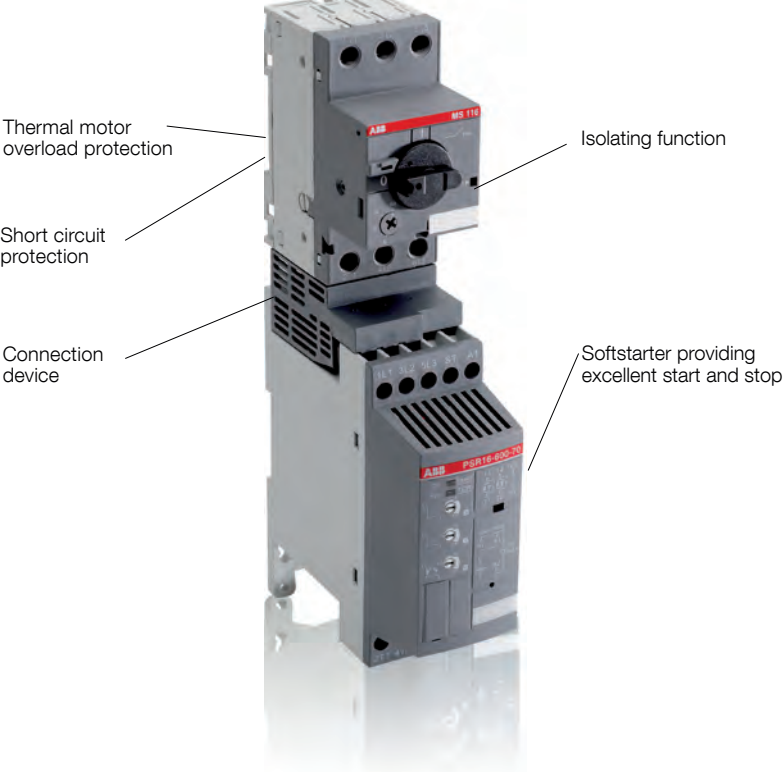

PSR – The compact range

Technical data

Rated insulation voltage U _i	600 V												
Rated operational voltage U _e	208...600 V +10 %/-15 %, 50/60 Hz ±5 %												
Rated control supply voltage U _s	100...240 V AC, 50/60Hz ±5 % or 24 V DC, +10 %/-15 %,												
Power consumption	PSR3	PSR6	PSR9	PSR12	PSR16	PSR25	PSR30	PSR37	PSR45	PSR60	PSR72	PSR85	PSR105
Supply circuit													
at 100-240 V AC	12 VA							10 VA					
at 24 V DC	5 W												
Max. Power loss at rated I _e	PSR3	PSR6	PSR9	PSR12	PSR16	PSR25	PSR30	PSR37	PSR45	PSR60	PSR72	PSR85	PSR105
	0.7 W	2.9 W	6.5 W	11.5 W	20.5 W	25 W	36 W	5.5 W	8.1 W	3.6 W	5.2 W	7.2 W	6.6 W
Starting capacity at I _r	4 x I _r for 6 sec.												
Number of starts per hour	See table on page 13.												
standard	10 ¹⁾												
with aux. fan	20 ¹⁾												
Service factor	100 %												
Ambient temperature													
during operation	-25 °C to + 60 °C (-13 to 140 °F) ²⁾												
during storage	-40 °C to + 70 °C (-40 to 158 °F)												
Maximum altitude	4000 m (13123 ft) ³⁾												
Degree of protection	PSR3	PSR6	PSR9	PSR12	PSR16	PSR25	PSR30	PSR37	PSR45	PSR60	PSR72	PSR85	PSR105
main circuit	IP20							IP10					
control circuit	IP20												
Connection	PSR3-PSR16					PSR25-PSR30		PSR37-PSR45		PSR60-PSR105			
main circuit													
cable area	1 x 0.75...2.5 mm ²					1 x 2.5...10 mm ²		1 x 6...35 mm ²		1 x 10...95 mm ²			
	1 x 18...14 AWG					1 x 12...8 AWG		1 x 8...4 AWG		1 x 6...2/0 AWG			
tightening torque	1 Nm - 9 lb.in					2.3 Nm - 20 lb.in		4.0 Nm - 35 lb.in		8.0 Nm - 71 lb.in			
control circuit	PSR3-PSR16					PSR25-PSR105							
cable area	1 x 0.75...2.5 mm ²					1 x 0.75...2.5 mm ²							
	2 x 0.75...1.5 mm ²					2 x 0.75...1.5 mm ²							
	1 x 18...14 AWG					1 x 18...14 AWG							
	2 x 16 AWG					2 x 16 AWG							
tightening torque	0.6 Nm - 5 lb.in					0.6 Nm - 5 lb.in							
Signal relays	PSR3-PSR16					PSR25-PSR105							
for Run signal													
Resistive load	240 V AC, 3 A / 24 V DC, 3 A					240 V AC, 3 A / 24 V DC, 3 A							
AC-15 (Contactor)	240 V AC, 0.5 A / 24 V DC, 0.5 A					240 V AC, 0.5 A / 24 V DC, 0.5 A							
for Top ramp signal													
Resistive load	-					240 V AC, 3 A / 24 V DC, 3 A							
AC-15 (Contactor)	-					240 V AC, 0.5 A / 24 V DC, 0.5 A							
LED													
for On/Ready	Green												
for Run/Top Of Ramp	Green												
Settings													
Ramp time during start	1-20 sec.												
Ramp time during stop	0-20 sec.												
Initial- and End Voltage	40-70%												

¹⁾ Valid for 50 % on time and 50 % off time. 4 x I_o for 6 sec., if other data is required, contact your sales office.

²⁾ Above 40 °C (104 °F) up to max. 60 °C (140 °F) reduce the rated current with 0.8 % per °C (0.44 % per °F).

³⁾ When used at high altitudes above 1000 meters (3281 ft) up to 4000 meters (13123 ft) you need to derate the rated current using the following formula.

$$[\% \text{ of } I_o = 100 - \frac{X - 1000}{150}] \quad X = \text{actual altitude for the softstarter in meter}$$

$$[\% \text{ of } I_o = 100 - \frac{X - 3280}{497}] \quad X = \text{actual altitude for the softstarter in feet}$$

PSR – The compact range

Technical data

Number of starts per hour using PSR softstarters

Motor current I_e	Starts/hour without auxiliary fan							
	10	20	30	40	50	60	80	100
3 A	PSR3							
6 A	PSR6				PSR9			
9 A	PSR9		PSR12		PSR16		PSR25	
12 A	PSR12		PSR16		PSR25		PSR30	
16 A	PSR16		PSR25		PSR30		PSR37	
25 A	PSR25	PSR30	PSR37		PSR45		PSR60	
30 A	PSR30	PSR37		PSR45		PSR60		PSR72
37 A	PSR37	PSR45		PSR60		PSR72	PSR85	PSR105
45 A	PSR45		PSR60		PSR72	PSR85	PSR105	-
60 A	PSR60		PSR72	PSR85	PSR105		-	-
72 A	PSR72	PSR85	PSR105		-	-	-	-
85 A	PSR85	PSR105		-	-	-	-	-
105 A	PSR105	-	-	-	-	-	-	-

Starts/hour with auxiliary fan

	10	20	30	40	50	60	80	100
	PSR3							
	PSR6				PSR9			
	PSR9		PSR12		PSR16		PSR25	
	PSR12		PSR16		PSR25		PSR30	
	PSR16		PSR25		PSR30		PSR37	
	PSR25	PSR30	PSR37		PSR45		PSR60	
	PSR30	PSR37		PSR45		PSR60		PSR72
	PSR37	PSR45		PSR60		PSR72	PSR85	PSR105
	PSR45		PSR60		PSR72	PSR85	PSR105	-
	PSR60		PSR72	PSR85	PSR105		-	-
	PSR72	PSR85	PSR105		-	-	-	-
	PSR85	PSR105		-	-	-	-	-
	PSR105	-	-	-	-	-	-	-

Data based on an ambient temperature of 40 °C (104 °F), starting current of $4 \times I_e$ and ramp time 6 seconds.
For more optimized selections, or to use PSR for heavy duty starts, please use the softstarter selection program, prosoft.

PSE – The efficient range

Description



Product description

- Wide rated operational voltage 208 – 600 V AC
- Wide rated control supply voltage 100 – 250 V, 50/60 Hz
- Rated operational current 18 to 370 A
- Wide ambient temperature range, -25 to +60 °C (-13 to 140 °F)
- Coated circuit boards for reliable operation in harsh environment
- Built-in by-pass on all sizes, saving energy and reducing installation time
- User friendly HMI with illuminated language neutral display and four button keypad
- Optional external keypad, IP66
- Torque control for excellent control of pumps
- Current limit, adjustable between $1.5 - 7 \times I_n$
- Motor overload protection with classes 10A, 10, 20 and 30
- Motor underload protection to detect pumps running dry
- Locked rotor protection, detecting jammed pumps
- Kick start to start jammed pumps or conveyor belts
- Analog output showing operational current, 4 – 20 mA
- Optional fieldbus communication using Profibus, Modbus, Devicenet or CANopen
- Sophisticated algorithm eliminating the DC-component and thereby providing excellent starting performance.

The PSE softstarter range is the world's first compact softstarters with Torque Control. This makes the PSE range an excellent choice for pumping application where water hammering normally is a big problem. With its compact design and advanced functionality, the PSE is also a very efficient solution for other common applications such as compressors and fans.

Torque control



The most important function when stopping pumps is torque control. Since the PSE softstarter is optimized for controlling pumps, this feature is a must.

Built-in by-pass for energy saving

Using the built-in by-pass after reaching full voltage will greatly reduce the power loss and thereby save energy. In the PSE softstarter range, the by-pass is built-in on all sizes, which will give the most compact starting solution and reduce the need for wiring during installation.

Coated circuit boards

All circuit boards in the new PSE softstarter have a protective coating to ensure a reliable operation even in tough environments like wastewater plants, where corrosive gases and acids may exist.

Motor protection

The PSE softstarter is equipped with built-in electronic overload protection, protecting the motor from overheating. Since no additional overload device is needed, our efficient design saves both space, installation time, and ultimately money.

Analog output

The analog output terminals can be connected to an analog current meter to show the current during operation and thereby eliminating the need for an additional current transformer. The analog output signal can also be used as an analog input to a PLC.

Display and keypad

The set-up of the PSE softstarter is done by using the four button keypad and the illuminated display, providing a quick and easy set-up. While operating, the display will also provide important status information such as current and voltage.

External keypad

As an option the PSE softstarter can be equipped with an external keypad for easy set-up and monitoring of the unit without opening the enclosure door. The keypad can also be used to copy parameters between different softstarters.

PSE – The efficient range



Description

The PSE Softstarter can be selected according to the rated motor power in normal duty applications like pumps, compressors, elevators, escalators, short conveyor belts and bow thrusters. See page 18.

For heavy duty applications like centrifugal fans, crushers, mixers, mills, stirrers and long conveyor belts, select a softstarter from page 19. The softstarter selection tool prosoft can also be used for a more optimized selection.



Settings

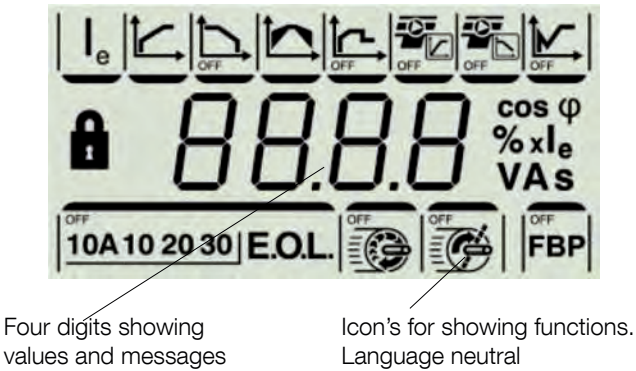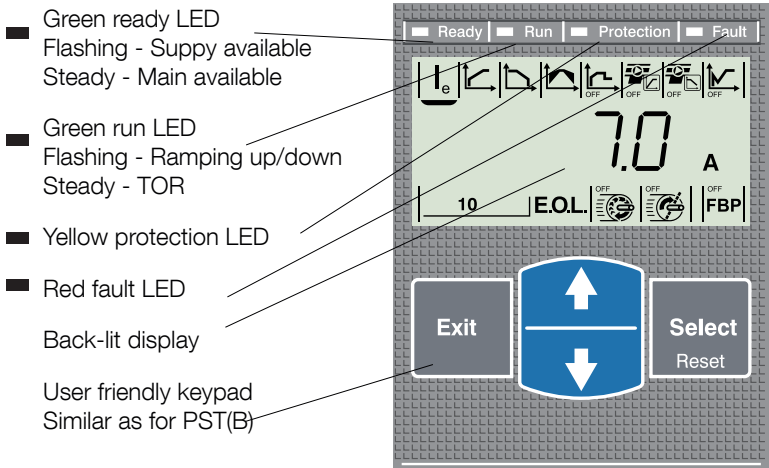

PSE – The efficient range

Overview



PSE18 ... PSE105

Normal start
In-line connected

(480 V) hp
(600 V) hp
UL/CSA, Max FLA

Softstarter									
PSE18	PSE25	PSE30	PSE37	PSE45	PSE60	PSE72	PSE85	PSE105	
10	15	20	25	30	40	50	60	75	
15	20	25	30	40	50	60	75	100	
18	25	28	34	42	60	68	80	104	

Using MCCB only, type 1
coordination will be achieved

MCCB (25 kA/600 V, 35 kA/480 V, 40 °C)

Max rating	Ts3L070TW	Ts3L100TW	Ts3L125TW	Ts3L150TW	Ts3L150TW	T4S250TW	T5S300TW	T5S300BW
------------	-----------	-----------	-----------	-----------	-----------	----------	----------	----------

Using J fuses, type 1
coordination will be
achieved

J type fuse protection (85 kA)

175% rating	30 A	40 A	45 A	50 A	70 A	100 A	110 A	125 A	175 A
Max rating	40 A	50 A	60 A	80 A	100 A	125 A	150 A	175 A	225 A

Minimum enclosure size ¹⁾ 610 x 508 x 305 mm / 24 x 20 x 12 in

Fusible disconnect switch
for the above J fuses

Fusible disconnect switch

OS30	OS60	OS100	OS200
------	------	-------	-------

The line contactor is not
required for the softstarter
itself but often used to open
if OL trips

Line contactor

AF26	AF30	AF50	AF63	AF75	AF95	AF110
------	------	------	------	------	------	-------

Overload protection is used
to protect the motor from
over heating

Electronic overload relay

Built-in

The by-pass will reduce the
power loss of the softstarter

By-pass

Built-in

¹⁾ Enclosure that has two latching points minimum. For use in pollution degree 2 environment.

PSE – The efficient range

Overview



PSE142 ... PSE170



PSE210 ... PSE370

Normal start
In-line connected

(480 V) hp
(600 V) hp
UL/CSA, Max FLA

Softstarter					
PSE142	PSE170	PSE210	PSE250	PSE300	PSE370
100	125	150	200	250	300
125	150	200	250	300	350
130	169	192	248	302	361

Using MCCB only, type 1
coordination will be achieved

MCCB (25 kA/600 V, 35 kA/480 V, 40 °C)	MCCB (25 kA/600 V, 50 kA/480 V, 40 °C)				
Max rating	T5S400BW	T6S600BW	T6S800BW		

Using J fuses, type 1
coordination will be
achieved

J type fuse protection (85 kA)					
175% rating	225 A	250 A	300 A	400 A	500 A
Max rating	300 A	350 A	450 A	500 A	600 A
Minimum enclosure size ¹⁾	915 x 762 x 305 mm / 36 x 30 x 12 in		1220 x 915 x 407 mm / 48 x 36 x 16 in		

Fusible disconnect switch
for the above J fuses

Fusible disconnect switch					
OS400			OS600		

The line contactor is not
required for the softstarter
itself but often used to open
if OL trips

Line contactor					
AF145	AF185	AF210	AF260	AF300	AF400

Overload protection is used
to protect the motor from
over heating

Electronic overload relay					
Built-in					

The by-pass will reduce the
power loss of the softstarter

By-pass					
Built-in					

¹⁾ Enclosure that has two latching points minimum. For use in pollution degree 2 environment.

How to select correct size

By using the guide here, you can quickly select a suitable softstarter for the most common applications. If a more precise selection is required, you can use prosoft, a selection software available at www.abb.com/lowvoltage

Quick guide for selection

Normal start Class 10		Heavy duty start class 30	
Ordering - see page 18		Ordering - see page 19	
Typical applications			
• Bow thruster	• Centrifugal pump	• Centrifugal fan	• Conveyor belt (long)
• Compressor	• Conveyor belt (short)	• Crusher	• Mill
• Elevator	• Escalator	• Mixer	• Stirrer
! If more than 10 starts/h Select <u>one</u> size larger than the standard selection			

PSE – The efficient range

Normal starts, class 10, In-Line, ordering details



PSE18 ... PSE370

Rated operational voltage, U_e , 208 - 600 V AC

Rated control supply voltage, U_c , 100 - 250 V AC, 50/60 Hz



PSE18 ... PSE105



PSE142 ... PSE170



PSE210 ... PSE370

230 V kW	400 V kW	500 V kW	208 V hp	230 V hp	480 V hp	600 V hp	UL/CSA Max rated operational current I_e A	Part number	Weight kg (lb)
4	7.5	11	5	5	10	15	18	PSE18-600-70	2.4 (5.29)
5.5	11	15	7.5	7.5	15	20	25	PSE25-600-70	2.4 (5.29)
7.5	15	18.5	7.5	10	20	25	28	PSE30-600-70	2.4 (5.29)
9	18.5	22	10	10	25	30	34	PSE37-600-70	2.4 (5.29)
11	22	30	10	15	30	40	42	PSE45-600-70	2.4 (5.29)
15	30	37	20	20	40	50	60	PSE60-600-70	2.4 (5.29)
18.5	37	45	20	25	50	60	68	PSE72-600-70	2.5 (5.51)
22	45	55	25	30	60	75	80	PSE85-600-70	2.5 (5.51)
30	55	75	30	40	75	100	104	PSE105-600-70	2.5 (5.51)
40	75	90	40	50	100	125	130	PSE142-600-70	4.2 (9.26)
45	90	110	60	60	125	150	169	PSE170-600-70	4.2 (9.26)
59	110	132	60	75	150	200	192	PSE210-600-70	12.4 (27.34)
75	132	160	75	100	200	250	248	PSE250-600-70	13.9 (30.64)
90	160	200	100	100	250	300	302	PSE300-600-70	13.9 (30.64)
110	200	250	125	150	300	350	361	PSE370-600-70	13.9 (30.64)

PSE – The efficient range

Heavy duty starts, class 30, In-Line, ordering details



PSE18 ... PSE370

Rated operational voltage, U_e , 208 - 600 V AC

Rated control supply voltage, U_c , 100 - 250 V AC, 50/60 Hz



PSE18 ... PSE105



PSE142 ... PSE170



PSE210 ... PSE370

230 V kW	400 V kW	500 V kW	208 V hp	230 V hp	480 V hp	600 V hp	UL/CSA Max rated operational current I_e A	Part number	Weight kg (lb)
3	5.5	7.5	3	3	7.5	10	11	PSE18-600-70	2.4 (5.29)
4	7.5	11	5	5	10	15	18	PSE25-600-70	2.4 (5.29)
5.5	11	15	7.5	7.5	15	20	25	PSE30-600-70	2.4 (5.29)
7.5	15	18.5	7.5	7.5	20	25	28	PSE37-600-70	2.4 (5.29)
9	18.5	22	10	10	25	30	34	PSE45-600-70	2.4 (5.29)
11	22	30	15	15	30	40	42	PSE60-600-70	2.4 (5.29)
15	30	37	20	20	40	50	60	PSE72-600-70	2.5 (5.51)
18.5	37	45	25	25	50	60	68	PSE85-600-70	2.5 (5.51)
22	45	55	30	30	60	75	80	PSE105-600-70	2.5 (5.51)
30	55	75	40	40	75	100	104	PSE142-600-70	4.2 (9.26)
40	75	90	50	50	100	125	130	PSE170-600-70	4.2 (9.26)
45	90	110	60	60	125	150	169	PSE210-600-70	12.4 (27.34)
59	110	132	75	75	150	200	192	PSE250-600-70	13.9 (30.64)
75	132	160	75	75	200	250	248	PSE300-600-70	13.9 (30.64)
90	160	200	125	125	250	300	302	PSE370-600-70	13.9 (30.64)

PSE – The efficient range

Accessories



ATK...

Cable connectors for Al and Cu cables

For softstarter type	Wire range mm ² (AWG)	Tightening torque max. Nm (lb-in)	Part number ^{1) 2)}	Pack ^{ing} piece	Weight kg (lb) 1 piece
PSE142 ... 170	25-150 (4 AWG - 300 MCM)	13.5 (275 lb-in)	ATK185	3	0.100 (0.220)
PSE210 ... 370	25-185 (4 AWG - 400 MCM)	43 (375 lb-in)	ATK300	3	0.168 (0.370)
PSE210 ... 370	2 x 25-240 (2 x 4 AWG - 500 MCM)	43 (375 lb-in)	ATK300/2	3	0.434 (0.957)



LW...

Terminal enlargements

For softstarter type	Dimensions hole ø mm (in)	bar mm (in)	Part number	Pack ^{ing} piece	Weight kg (lb) 1 piece
PSE142...170	10.5 (0.413)	20 x 5 (0.787 x 0.197)	LW185	1	0.450 (0.992)
PSE210...370	13 (0.512)	40 x 6 (1.575 x 0.236)	LW300	1	1.230 (2.712)



LE185

Terminal nut washer kits ¹⁾

For softstarter type	Req. qty	Part number	Pack ^{ing} piece	Weight kg (lb) 1 piece
PSE142...170	2	LE185	2	0.200 (0.441)
PSE210...370	2	LE300	2	0.300 (0.661)



LT ... -AL

Terminal shrouds

For softstarter type	Suitable for	Req. qty	Part number ³⁾	Pack ^{ing} piece	Weight kg (lb) 1 piece
PSE142...170	Compression lugs	2	LT185-AL	2	0.220 (0.485)
PSE210...370	Compression lugs	2	LT300-AL	2	0.280 (0.617)

External keypad including a 3m cable

For softstarter type	Part number	Pack ^{ing} piece	Weight kg (lb) 1 piece
PSE18...370	PSEEK	1	–



PSEEK

Fieldbus plug connection accessory

For softstarter type	Part number	Pack ^{ing} piece	Weight kg (lb) 1 piece
The same accessory for all sizes	PS-FBPA	1	0.060 (0.132)



PS-FBPA

¹⁾ The terminal nut washer kits come standard with the PSE unit.

²⁾ Two lug sets are needed per PSE.

³⁾ The LT300-AL is not compatible with ATK300/2 cable connector.

PSE – The efficient range

Technical data

Rated insulation voltage U_i	600 V
Rated operational voltage U_e	208 ... 600 V +10 %/-15 %
Rated control supply voltage U_s	100 ... 250 V +10 %/-15 %, 50/60 Hz ± 5 %
Rated control circuit voltage U_c	Internal 24 V DC
Starting capacity	$4xI_n$ for 10 sec.
Number of starts per hour	10 ¹⁾
Overload capability, Overload Class	10
Ambient temperature	
During operation	-25 ... +60 °C (-13 to 140 °F) ²⁾
During storage	-40 ... +70 °C (-40 to 158 °F)
Maximum Altitude	4000 m (13123 ft) ³⁾
Degree of protection	
Main circuit	IP00
Supply and Control circuit	IP20
Main circuit	
Built-in By-pass	Yes
Cooling system - Fan cooled (thermostat controlled)	Yes
HMI for settings	
Display	4 7-segments and icons. Illuminated
Keypad	2 selection keys and 2 navigation keys
Main settings	
Setting current	Size dependent
Ramp time during start	1-30 sec
Ramp time during stop	0-30 sec
Initial / end voltage	30-70%
Current limit	1,5-7x I_n
Torque control for start	Yes / No
Torque control for stop	Yes / No
Kick start	Off, 30-100%
Signal relays	
Number of signal relays	3
K2	Run signal
K3	TOR (By-pass) signal
K1	Event signal
Rated operational voltage U_e	250 V AC / 24 V DC ⁴⁾
Rated thermal current I_{th}	3 A
Rated operational current I_e at AC-15 ($U_e = 250$ V)	1.5 A

¹⁾ Valid for 50 % on time and 50 % off time, with $3.5 \times I_n$ for 7 seconds. If other data is required, please contact your sales office

²⁾ Above 40 °C (104 °F) up to max. 60 °C (140 °F) reduce the rated current with 0.6 % per °C (0.33 % per °F).


³⁾ When used at high altitudes above 1000 meters (3281 ft) up to 4000 meters (13123 ft) you need to derate the rated current using the following formula.

$$\left[\% \text{ of } I_e = 100 - \frac{x - 1000}{150} \right] \quad x = \text{actual altitude for the softstarter in meter}$$

$$\left[\% \text{ of } I_e = 100 - \frac{x - 3280}{497} \right] \quad x = \text{actual altitude for the softstarter in feet}$$

⁴⁾ A common voltage needs to be used for all 3 signal relays.




Analog output	
Output signal reference	4 ... 20 mA
Type of output signal	I Amp
Scaling	Fixed at $1.2 \times I_e$
Control circuit	
Number of inputs	3 (start, stop, reset of faults)
Signal indication LED's	
On / Ready	Green flashing / steady
Run / TOR	Green flashing / steady
Protection	Yellow
Fault	Red
Protections	
Electronic overload	Yes (Class 10A, 10, 20, 30)
Locked rotor protection	Yes
Underload protection	Yes
Field bus connection	
Connection for ABB FieldBusPlug	Yes (option)
External keypad	
Display LCD type	
Ambient temperature	
during operation	-25 ... +60 °C (-13 to 140 °F)
during storage	-40 ... +70 °C (-40 to 158 °F)
Degree of protection	IP66

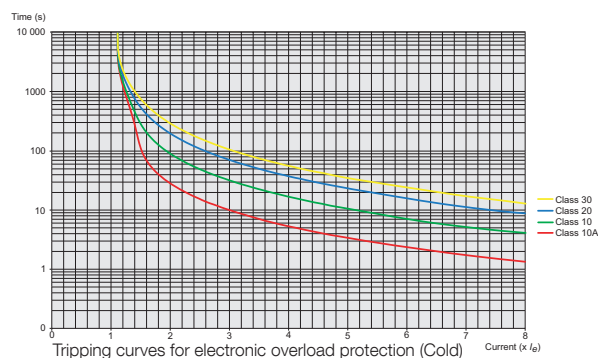

PSE – The efficient range

Technical data

Cross section of connection cables

		Softstarter PSE18 ... PSE105	PSE142 ... PSE170	PSE210 ... PSE370
Main circuit				
Connection clamp				
Solid/stranded	1 x mm² (AWG)	2.5...70 (12...2/0)		See accessories
Solid/stranded	2 x mm² (AWG)	2.5...70 (12...2/0)		See accessories
Tightening torque (recommended)	Nm (lb-in)	9 (79.66)		See accessories
Connection bar				
				
Width and thickness	mm (in)	13 (0.512) x 3 (0.118)	17.5 (0.689) x 5 (0.197)	20 (0.787) x 5 (0.197)
Hole diameter	mm (in)	6.5 (0.256)	8.5 (0.335)	10.2 (0.402)
Tightening torque (recommended)	Nm (lb-in)	9 (79.66)	18 (159.31)	28 (247.82)
Supply and control circuit				
Connection clamp				
Solid/stranded	1 x mm² (AWG)	0.2...2.5 (24...14)	0.2...2.5 (24...14)	0.2...2.5 (24...14)
Solid/stranded	2 x mm² (AWG)	0.2...1.5 (24...16)	0.2...1.5 (24...16)	0.2...1.5 (24...16)
Tightening torque (recommended)	Nm (lb-in)	0.5 (4.43)	0.5 (4.43)	0.5 (4.43)

Semi-conductor fuse ratings and power losses

For Softstarter	Overload protection		Max power loss at rated I _e (Internal by-pass)	Max semi-conductor fuse rating - main circuit Coordination type 2 (85 kA)			Supply circuit power requirements ¹⁾
	Type	Current range		Bussman Fuses, DIN43 620			
				Type	A	Type	
PSE							
PSE18	Integrated	5.4-18	0.2	40	170M1563	000	16
PSE25	Integrated	7.5-25	0.4	50	170M1564	000	16
PSE30	Integrated	9-30	0.5	80	170M1566	000	16
PSE37	Integrated	11.1-37	0.8	100	170M1567	000	16
PSE45	Integrated	13.5-45	1.2	125	170M1568	000	16
PSE60	Integrated	18-60	2.2	160	170M1569	000	16
PSE72	Integrated	21.6-72	3.1	250	170M1571	000	16
PSE85	Integrated	25.5-85	4.3	315	170M1572	000	16
PSE105	Integrated	31.8-106	6.6	400	170M3819	1	16
PSE142	Integrated	42.9-143	12.1	450	170M5809	2	16
PSE170	Integrated	51.3-171	17.6	500	170M5810	2	16
PSE210	Integrated	63-210	8.8	630	170M5812	2	23/350
PSE250	Integrated	75-250	12.5	700	170M5813	2	23/350
PSE300	Integrated	90.6-302	18	800	170M6812	3	23/350
PSE370	Integrated	111-370	27.4	900	170M6813	3	23/350

¹⁾ For the supply circuit use a maximum 6 A time-delay fuse or an MCB with type C characteristics.

[illegible]

PST(B) – The advanced range

Description



Description

- Wide rated operational voltage 208 – 690 V AC
- Wide rated control supply voltage 100 – 250 V, 50/60 Hz
- Rated operational current 30 to 1050 A (Up to 1810 A inside delta)
- Wide ambient temperature range, -25 to +50 °C (-13 to 122 °F)
- Both in line and inside delta connection
- Coated circuit boards available, for reliable operation even in harsh environments
- Full text display in 14 languages and 4 button keypad for easy set-up and operation
- Optional external keypad, IP66
- Built-in by-pass contactor on PSTB (from 370 A) for energy saving and easy installation
- Prepared for external by-pass on PST (30 – 300 A)
- Torque Control for excellent control of pumps
- Current limit, adjustable between $1.5 - 7 \times I_n$
- Fieldbus communication using Profibus, Modbus, Devicenet or CANopen
- Dual motor overload protection with classes 10A, 10, 20 and 30
- Adaptable motor underload protection to detect pumps running dry
- Adaptable locked rotor protection to detect jammed pumps
- PTC protection to protect the motor from overheating
- Adjustable kick start to start jammed pumps
- Programmable output signal relays
- Programmable pre-warning functions
- Event log with time stamp
- Analog output showing current, voltage, power factor etc.
0 – 10 V, 0 – 20 mA, 4 – 20 mA

The PST(B) softstarter is the most advanced softstarter in the ABB product portfolio and is equipped with almost all imaginable features. This makes the PST(B) ideal for almost every application.



Torque Control

The ABB torque control function is developed together with pump manufacturers to ensure the best possible pump stop, eliminating problems with water hammering and pressure surges.

By-pass for energy saving

By-passing the softstarter after reaching full voltage, will save energy and reduce the heat generation. The PST softstarters are equipped with extra terminals making the connection of an external by-pass contactor easier and allowing all protections to be active during by-pass. On the PSTB softstarters, an ABB AF-contactor is already built-in, ensuring a compact starting solution with minimal wiring during installation.

Advanced protections

The PST(B) softstarters are equipped with almost all protections imaginable for protecting the motor, the softstarter and the application. To offer more flexibility, all protections can be tailored to your specific needs.

Flexible analog output

The analog output terminals can be connected to an analog current meter to show the current during operation and thereby eliminating the need for an additional current transformer. The analog output signal can also be used as an analog input to a PLC.

Fieldbus communication

Using the ABB FieldBusPlug, all the most common fieldbus protocols are supported. Using the PLC system it is possible to set-up the softstarter, read status information and also to control the softstarter.

Display and keypad

The PST(B) softstarter is equipped with a full text display showing all information in clear text in your own language. To make it even easier to set-up, there are standard settings for many common applications, such as centrifugal pump. Selecting this will automatically provide all required settings including torque control when stopping.


External keypad

As an option, the PST(B) softstarter can be equipped with an external keypad for easy set-up and monitoring of the unit without opening the enclosure door. The keypad can also be used to copy parameters between different softstarters.

PST(B) – The advanced range

Description

The PST Softstarter can be selected according to the rated motor power in normal duty applications like pumps, compressors, elevators, escalators, short conveyor belts and bow thrusters. See page 28-29, For heavy duty applications like centrifugal fans, crushers, mixers, mills, stirrers and long conveyor belts, select a softstarter from page 30-31. The softstarter selection tool prosoft can also be used for a more optimized selection.

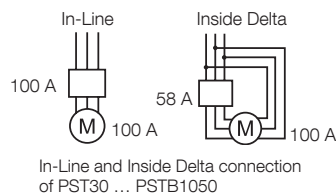

- Green on LED
- Yellow protection LED
- Red fault LED
- Full text display in 14 languages
- User friendly keypad
- Pre set application settings



External keypad with same design as the fixed one

PST(B) – The advanced range

Overview



PST30 ... PST72



PST85 ... PST142

Normal start
In-Line connected

(480 V) hp

(600 V) hp

UL/CSA, Max FLA

Softstarter									
PST30	PST37	PST44	PST50	PST60	PST72	PST85	PST105	PST142	
20	25	30	40	40	50	60	75	100	
25	30	40	50	50	60	75	100	125	
28	34	42	54	60	68	80	104	130	

Using MCCB only, type 1
coordination will be achieved

MCCB (10 kA/480-600 V, 40 °C)

Ts3

T4

Using J fuses, type 1
coordination will be
achieved

175 % rating

Max rating

Minimum enclosure size ¹⁾

J type fuse protection (85 kA)

45 A	50 A	70 A	90 A	100 A	110 A	125 A	175 A	225 A
90 A	110 A	150 A	175 A	225 A	250 A	350 A	400 A	
508 x 508 x 305 mm / 20 x 20 x 12 in						610 x 508 x 305 mm / 24 x 20 x 12 in		

Fusible disconnect switch
for the above J fuses

Fusible disconnect switch

OS60

OS100

OS200

OS400

The line contactor is not
required for the softstarter
itself but often used to
open if OL trips

Line contactor

AF30

AF50

AF63

AF75

AF95

AF110

AF145

Overload protection is used
to protect the motor from
over heating

Electronic overload relay

Built-in

The bypass contactor will
reduce the power loss of
the softstarter. All softstart-
ers can be operated without
by-pass

By-pass contactor (AC-1)

AF16

AF26

AF30

AF50

AF75

AF110

¹⁾ Enclosure that has two latching points minimum. For use in pollution degree 2 environment.

PST(B) – The advanced range

Overview



PST175 ... PST300



PSTB370 ... PSTB470



PSTB570 ... PSTB1050

Normal start
In-Line connected

(480 V) hp

(600 V) hp

UL/CSA, Max FLA

Softstarter									
PST175	PST210	PST250	PST300	PSTB370	PSTB470	PSTB570	PSTB720	PSTB840	PSTB1050
125	150	200	250	300	400	500	600	700	900
150	200	250	300	350	500	600	700	800	1000
156	192	248	302	361	480	590	720	840	1062

Using MCCB only, type 1
coordination will be achieved

MCCB (18 kA/480-600 V, 40 °C)			MCCB (30 kA/480-600 V, 40 °C)			MCCB (42 kA/480-600 V, 40 °C)		
T4	T5		T6H			T7H		T8

Using J or L fuses, type 1
coordination will be achieved
175 % rating

Max rating

Minimum enclosure size ¹⁾

J or L type fuse protection (85 kA)									
250 A	300 A	400 A	500 A	600 A	800 A	1000 A	1200 A	1400 A	1800 A
400 A		450 A	600 A	700 A	1200 A			-	-
762 x 762 x 305 mm / 30 x 30 x 12 in				1220 x 915 x 407 mm / 48 x 36 x 16 in					

Fusible disconnect switch
for the above J fuses

Fusible disconnect switch					
OS400		OS600		OS800	OS1200
				-	-

The line contactor is not
required for the softstarter
itself but often used to
open if OL trips

Line contactor									
AF185	AF210	AF260	AF300	AF400	AF580		AF750	AF1350	AF1650

Overload protection is used
to protect the motor from
over heating

Electronic overload relay									
Built-in									

The bypass contactor will
reduce the power loss of
the softstarter. All softstart-
ers can be operated without
by-pass

By-pass contactor (AC-1)									
AF145		AF185	AF210	Built-in					

¹⁾ Enclosure that has two latching points minimum. For use in pollution degree 2 environment.

How to select correct size

By using the guide here, you can quickly
select a suitable softstarter for the most
common applications.

If a more precise selection is required,
you can use prosoft, a selection software
available at www.abb.com/lowvoltage

Quick guide for selection

Normal start Class 10	Heavy duty start class 30
Ordering - see page 28 - 29	Ordering - see page 30 - 31
Typical applications	
• Bow thruster • Compressor • Elevator	• Centrifugal pump • Conveyor belt (short) • Escalator • Centrifugal fan • Crusher • Mixer • Conveyor belt (long) • Mill • Stirrer
! If more than 10 starts/h Select <u>one</u> size larger than the standard selection	

PST(B) – The advanced range

Normal starts, class 10, In-Line, ordering details



PST30 ... PSTB1050

Rated operational voltage U_e , 208 - 600 V

Rated control supply voltage, U_s , 100 - 250 V AC, 50/60 Hz



PST30 ... PST72



PST85 ... PST142



PST175 ... PST300



PSTB370 ... PSTB470



PSTB570 ... PSTB1050

400 V kW	500 V kW	690 V kW	208 V hp	230 V hp	480 V hp	600 V hp	UL/CSA Max rated operational current I_e A	Part number *)	Weight kg (lb)
15	18.5	-	7.5	10	20	25	28	PST30-600-70□	4.80 (10.58)
18.5	22	-	10	10	25	30	34	PST37-600-70□	4.80 (10.58)
22	25	-	10	15	30	40	42	PST44-600-70□	4.80 (10.58)
25	30	-	15	20	40	50	54	PST50-600-70□	4.80 (10.58)
30	37	-	20	20	40	50	60	PST60-600-70□	5.00 (11.02)
37	45	-	20	25	50	60	68	PST72-600-70□	5.00 (11.02)
45	55	-	25	30	60	75	80	PST85-600-70□	11.20 (24.69)
55	75	-	30	40	75	100	104	PST105-600-70□	13.00 (28.66)
75	90	-	40	50	100	125	130	PST142-600-70□	13.00 (28.66)
90	110	-	50	60	125	150	156	PST175-600-70□	21.50 (47.40)
110	132	-	60	75	150	200	192	PST210-600-70□	21.50 (47.40)
132	160	-	75	100	200	250	248	PST250-600-70□	23.00 (50.71)
160	200	-	100	100	250	300	302	PST300-600-70□	23.00 (50.71)
200	257	-	125	150	300	350	361	PSTB370-600-70□	31.00 (68.34)
250	315	-	150	200	400	500	480	PSTB470-600-70□	31.00 (68.34)
315	400	-	200	250	500	600	590	PSTB570-600-70□	52.00 (114.64)
400	500	-	250	300	600	700	720	PSTB720-600-70□	55.00 (121.25)
450	600	-	300	350	700	800	840	PSTB840-600-70□	60.00 (133.28)
560	730	-	400	450	900	1000	1062	PSTB1050-600-70□	60.00 (133.28)

PST30 ... PSTB1050

Rated operational voltage U_e , 400 - 690 V


Rated control supply voltage, U_s , 100 - 250 V AC, 50/60 Hz

15	18.5	25			20	25	28	PST30-690-70□	4.80 (10.58)
18.5	22	30			25	30	34	PST37-690-70□	4.80 (10.58)
22	25	37			30	40	42	PST44-690-70□	4.80 (10.58)
25	30	45			40	50	54	PST50-690-70□	4.80 (10.58)
30	37	55			40	50	60	PST60-690-70□	5.00 (11.02)
37	45	59			50	60	68	PST72-690-70□	5.00 (11.02)
45	55	75			60	75	80	PST85-690-70□	11.20 (24.69)
55	75	90			75	100	104	PST105-690-70□	13.00 (28.66)
75	90	132			100	125	130	PST142-690-70□	13.00 (28.66)
90	110	160			125	150	156	PST175-690-70□	21.50 (47.40)
110	132	184			150	200	192	PST210-690-70□	21.50 (47.40)
132	160	220			200	250	248	PST250-690-70□	23.00 (50.71)
160	200	257			250	300	302	PST300-690-70□	23.00 (50.71)
200	257	355			300	350	361	PSTB370-690-70□	31.00 (68.34)
250	315	450			400	500	480	PSTB470-690-70□	31.00 (68.34)
315	400	560			500	600	590	PSTB570-690-70□	52.00 (114.64)
400	500	710			600	700	720	PSTB720-690-70□	55.00 (121.25)
450	600	800			700	800	840	PSTB840-690-70□	60.00 (133.28)
560	730	1000			900	1000	1062	PSTB1050-690-70□	60.00 (133.28)

*) Add code letter in Type acc. to below:
 □ No code letter = Normal
 T = Coated PCBs

PST(B) – The advanced range

Normal starts, class 10, Inside Delta, ordering details



PST30...PSTB1050

Rated operational voltage U_e , 208 - 600 V

Rated control supply voltage, U_s , 100 - 250 V AC, 50/60 Hz



PST30 ... PST72



PST85 ... PST142



PST175 ... PST300



PSTB370 ... PSTB470



PSTB570 ... PSTB1050

400 V kW	500 V kW	690 V kW	208 V hp	230 V hp	480 V hp	600 V hp	UL/CSA Max rated operational current I_e A	Part number *)	Weight kg (lb)
25	30	-	10	15	30	40	42	PST30-600-70□	4.80 (10.58)
30	37	-	15	20	40	50	54	PST37-600-70□	4.80 (10.58)
37	45	-	20	25	50	60	72	PST44-600-70□	4.80 (10.58)
45	55	-	25	30	60	75	80	PST50-600-70□	4.80 (10.58)
55	75	-	30	40	75	100	104	PST60-600-70□	5.00 (11.02)
59	80	-	30	40	75	100	104	PST72-600-70□	5.00 (11.02)
75	90	-	40	50	100	125	130	PST85-600-70□	11.20 (24.69)
90	110	-	50	60	125	150	156	PST105-600-70□	13.00 (28.66)
132	160	-	60	75	150	200	192	PST142-600-70□	13.00 (28.66)
160	200	-	75	100	200	250	248	PST175-600-70□	21.50 (47.40)
184	250	-	100	100	250	300	302	PST210-600-70□	21.50 (47.40)
220	295	-	125	150	300	350	361	PST250-600-70□	23.00 (50.71)
257	355	-	150	200	400	500	480	PST300-600-70□	23.00 (50.71)
355	450	-	200	250	500	600	590	PSTB370-600-70□	31.00 (68.34)
450	600	-	250	300	600	700	720	PSTB470-600-70□	31.00 (68.34)
540	700	-	300	350	700	800	840	PSTB570-600-70□	52.00 (114.64)
710	880	-	400	500	1000	1200	1247	PSTB720-600-70□	55.00 (121.25)
800	1000	-	500	600	1200	1500	1454	PSTB840-600-70□	60.00 (133.28)
1000	1250	-	600	700	1500	1800	1839	PSTB1050-600-70□	60.00 (133.28)

PST30 ... PSTB1050

Rated operational voltage U_e , 400 - 690 V

Rated control supply voltage, U_s , 100 - 250 V AC, 50/60 Hz

400 V kW	500 V kW	690 V kW	208 V hp	230 V hp	480 V hp	600 V hp	UL/CSA Max rated operational current I_e A	Part number *)	Weight kg (lb)
25	30	45			30	40	42	PST30-690-70□	4.80 (10.58)
30	37	55			40	50	54	PST37-690-70□	4.80 (10.58)
37	45	59			50	60	72	PST44-690-70□	4.80 (10.58)
45	55	75			60	75	80	PST50-690-70□	4.80 (10.58)
55	75	90			75	100	104	PST60-690-70□	5.00 (11.02)
59	80	110			75	100	104	PST72-690-70□	5.00 (11.02)
75	90	132			100	125	130	PST85-690-70□	11.20 (24.69)
90	110	160			125	150	156	PST105-690-70□	13.00 (28.66)
132	160	220			150	200	192	PST142-690-70□	13.00 (28.66)
160	200	257			200	250	248	PST175-690-70□	21.50 (47.40)
184	250	315			250	300	302	PST210-690-70□	21.50 (47.40)
220	295	400			300	350	361	PST250-690-70□	23.00 (50.71)
257	355	500			400	500	480	PST300-690-70□	23.00 (50.71)
355	450	600			500	600	590	PSTB370-690-70□	31.00 (68.34)
450	600	800			600	700	720	PSTB470-690-70□	31.00 (68.34)
540	700	960			700	800	840	PSTB570-690-70□	52.00 (114.64)
710	880	1200			1000	1200	1247	PSTB720-690-70□	55.00 (121.25)
800	1000	1400			1200	1500	1454	PSTB840-690-70□	60.00 (133.28)
1000	1250	1700			1500	1800	1839	PSTB1050-690-70□	60.00 (133.28)

*) Add code letter in Type acc. to below:
☐ No code letter = Normal
T = Coated PCBs

PST(B) – The advanced range

Heavy Duty, class 30, In-Line, ordering details



PST30...PSTB1050

Rated operational voltage U_e , 208 - 600 V

Rated control supply voltage, U_s , 100 - 250 V AC, 50/60 Hz



PST30 ... PST72



PST85 ... PST142



PST175 ... PST300



PSTB370 ... PSTB470



PSTB570 ... PSTB1050

400 V kW	500 V kW	690 V kW	208 V hp	230 V hp	480 V hp	600 V hp	UL/CSA Max rated operational current I_e A	Part number *)	Weight kg (lb)
11	15	-	5	7.5	15	20	25	PST30-600-70□	4.80 (10.58)
15	18.5	-	7.5	10	20	25	28	PST37-600-70□	4.80 (10.58)
18.5	22	-	10	10	25	30	34	PST44-600-70□	4.80 (10.58)
22	25	-	10	15	30	40	42	PST50-600-70□	4.80 (10.58)
25	30	-	15	20	40	50	54	PST60-600-70□	5.00 (11.02)
30	37	-	20	20	40	50	60	PST72-600-70□	5.00 (11.02)
37	45	-	20	25	50	60	68	PST85-600-70□	11.20 (24.69)
45	55	-	25	30	60	75	80	PST105-600-70□	13.00 (28.66)
55	75	-	30	40	75	100	104	PST142-600-70□	13.00 (28.66)
75	90	-	40	50	100	125	130	PST175-600-70□	21.50 (47.40)
90	110	-	50	60	125	150	156	PST210-600-70□	21.50 (47.40)
110	132	-	60	75	150	200	192	PST250-600-70□	23.00 (50.71)
132	160	-	75	100	200	250	248	PST300-600-70□	23.00 (50.71)
160	200	-	100	100	250	300	302	PSTB370-600-70□	31.00 (68.34)
200	257	-	125	150	300	350	361	PSTB470-600-70□	31.00 (68.34)
250	315	-	150	200	400	500	480	PSTB570-600-70□	52.00 (114.64)
315	400	-	200	250	500	600	590	PSTB720-600-70□	55.00 (121.25)
400	500	-	250	300	600	700	720	PSTB840-600-70□	60.00 (133.28)
450	600	-	300	350	700	800	840	PSTB1050-600-70□	60.00 (133.28)

PST30...PSTB1050

Rated operational voltage U_e , 400 - 690 V

Rated control supply voltage, U_s , 100 - 250 V AC, 50/60 Hz

11	15	18.5			15	20	25	PST30-600-70□	4.80 (10.58)
15	18.5	25			20	25	28	PST37-600-70□	4.80 (10.58)
18.5	22	30			25	30	34	PST44-600-70□	4.80 (10.58)
22	25	37			30	40	42	PST50-600-70□	4.80 (10.58)
25	30	45			40	50	54	PST60-600-70□	5.00 (11.02)
30	37	55			40	50	60	PST72-600-70□	5.00 (11.02)
37	45	59			50	60	68	PST85-600-70□	11.20 (24.69)
45	55	75			60	75	80	PST105-600-70□	13.00 (28.66)
55	75	90			75	100	104	PST142-600-70□	13.00 (28.66)
75	90	132			100	125	130	PST175-600-70□	21.50 (47.40)
90	110	160			125	150	156	PST210-600-70□	21.50 (47.40)
110	132	184			150	200	192	PST250-600-70□	23.00 (50.71)
132	160	220			200	250	248	PST300-600-70□	23.00 (50.71)
160	200	257			250	300	302	PSTB370-600-70□	31.00 (68.34)
200	257	355			300	350	361	PSTB470-600-70□	31.00 (68.34)
250	315	450			400	500	480	PSTB570-600-70□	52.00 (114.64)
315	400	560			500	600	590	PSTB720-600-70□	55.00 (121.25)
400	500	710			600	700	720	PSTB840-600-70□	60.00 (133.28)
450	600	800			700	800	840	PSTB1050-600-70□	60.00 (133.28)

*) Add code letter in Type acc. to below:
 □ No code letter = Normal
 T = Coated PCBs

PST(B) – The advanced range

Heavy Duty, class 30, Inside Delta, ordering details



PST30...PSTB1050

Rated operational voltage U_e , 208 - 600 V

Rated control supply voltage, U_s , 100 - 250 V AC, 50/60 Hz



PST30 ... PST72



PST85 ... PST142



PST175 ... PST300



PSTB370 ... PSTB470



PSTB570 ... PSTB1050

400 V kW	500 V kW	690 V kW	208 V hp	230 V hp	480 V hp	600 V hp	UL/CSA Max rated operational current I_e A	Part number *)	Weight kg (lb)
18.5	25	-	7.5	10	25	30	34	PST30-600-70□	4.80 (10.58)
25	30	-	10	15	30	40	42	PST37-600-70□	4.80 (10.58)
30	37	-	15	20	40	50	54	PST44-600-70□	4.80 (10.58)
37	45	-	20	25	50	60	72	PST50-600-70□	4.80 (10.58)
45	55	-	25	30	60	75	80	PST60-600-70□	5.00 (11.02)
55	75	-	30	40	75	100	104	PST72-600-70□	5.00 (11.02)
59	80	-	40	40	75	100	104	PST85-600-70□	11.20 (24.69)
75	90	-	40	50	100	125	130	PST105-600-70□	13.00 (28.66)
90	110	-	50	60	125	150	156	PST142-600-70□	13.00 (28.66)
132	160	-	60	75	150	200	192	PST175-600-70□	21.50 (47.40)
160	200	-	75	100	200	250	248	PST210-600-70□	21.50 (47.40)
184	250	-	100	100	250	300	302	PST250-600-70□	23.00 (50.71)
220	295	-	125	150	300	350	361	PST300-600-70□	23.00 (50.71)
257	355	-	150	200	400	500	480	PSTB370-600-70□	31.00 (68.34)
355	450	-	200	250	500	600	590	PSTB470-600-70□	31.00 (68.34)
450	600	-	250	300	600	700	720	PSTB570-600-70□	52.00 (114.64)
540	700	-	300	350	700	800	840	PSTB720-600-70□	55.00 (121.25)
710	880	-	400	500	1000	1200	1247	PSTB840-600-70□	60.00 (133.28)
800	1000	-	500	600	1200	1500	1454	PSTB1050-600-70□	60.00 (133.28)

PST30...PSTB1050

Rated operational voltage U_e , 400 - 690 V

Rated control supply voltage, U_s , 100 - 250 V AC, 50/60 Hz

400 V kW	500 V kW	690 V kW	208 V hp	230 V hp	480 V hp	600 V hp	UL/CSA Max rated operational current I_e A	Part number *)	Weight kg (lb)
18.5	25	37			25	30	34	PST30-690-70□	4.80 (10.58)
25	30	45			30	40	42	PST37-690-70□	4.80 (10.58)
30	37	55			40	50	54	PST44-690-70□	4.80 (10.58)
37	45	59			50	60	72	PST50-690-70□	4.80 (10.58)
45	55	75			60	75	80	PST60-690-70□	5.00 (11.02)
55	75	90			75	100	104	PST72-690-70□	5.00 (11.02)
59	80	110			75	100	104	PST85-690-70□	11.20 (24.69)
75	90	132			100	125	130	PST105-690-70□	13.00 (28.66)
90	110	160			125	150	156	PST142-690-70□	13.00 (28.66)
132	160	220			150	200	192	PST175-690-70□	21.50 (47.40)
160	200	257			200	250	248	PST210-690-70□	21.50 (47.40)
184	250	315			250	300	302	PST250-690-70□	23.00 (50.71)
220	295	400			300	350	361	PST300-690-70□	23.00 (50.71)
257	355	500			400	500	480	PSTB370-690-70□	31.00 (68.34)
355	450	600			500	600	590	PSTB470-690-70□	31.00 (68.34)
450	600	800			600	700	720	PSTB570-690-70□	52.00 (114.64)
540	700	960			700	800	840	PSTB720-690-70□	55.00 (121.25)
710	880	1200			1000	1200	1247	PSTB840-690-70□	60.00 (133.28)
800	1000	1400			1200	1500	1454	PSTB1050-690-70□	60.00 (133.28)

*) Add code letter in Type acc. to below:
☐ No code letter = Normal
T = Coated PCBs

PST(B) – The advanced range

Accessories

Terminal lug kits for Al and Cu cables

For PST(B)85...1050 without external bypass (line/load lugs and terminal nut washer)

For softstarter type	Wire range AWG	Tightening torque max. Nm (lb-in)	Part number	Pack ^{ing} piece
PST85 ...142	#4 - 300 MCM (1 per phase)	13.5 (275 lb-in)	PSLK-185	6
PST175 ...300	#4 - 400 MCM (1 per phase)	43 (375 lb-in)	PSLK-300	6
PST175...300	#4 - 500 MCM (2 per phase)	43 (375 lb-in)	PSLK-300/2	6
PSTB370...470	2/0 - 500 MCM (2 per phase)	43 (375 lb-in)	PSLK-580/2	6
PSTB570 ...1050	2/0 - 500 MCM (3 per phase)	43 (375 lb-in)	PSLK-750/3	6

For PST85...300 with external bypass (line/load lugs and terminal nut washer)

PST85 ...142	#4 - 300 MCM (1 per phase)	13.5 (275 lb-in)	PSLK-185-B	9
PST175 ...300	#4 - 400 MCM (1 per phase)	43 (375 lb-in)	PSLK-300-B	9
PST175 ...300	#4 - 500 MCM (2 per phase)	43 (375 lb-in)	PSLK-300/2-B	9

Terminal extensions

For softstarter type	Dimensions hole ø mm ² (in ²)	bar mm (in)	Part number	Pack ^{ing} piece	Weight kg (lb) 1 piece
PST85 ...142	8.5 (0.0132)	17.5 x 5 (0.689 x 0.197)	LX185 ¹⁾	1	0.250 (0.551)
PST175 ...300	10.5 (0.0163)	20 x 5 (0.787 x 0.197)	LX300 ²⁾	1	0.350 (0.772)
PSTB370...470	10.5 (0.0163)	25 x 5 (0.984 x 0.197)	LX460	1	0.500 (1.102)
PSTB570...1050	13 (0.0202)	40 x 6 (1.575 x 0.236)	LX750	1	0.850 (1.874)

Terminal enlargements

For softstarter type	Dimensions hole ø mm ² (in ²)	bar mm (in)	Part number	Pack ^{ing} piece	Weight kg (lb) 1 piece
PST30 ...72	6.5 (0.0101)	15 x 3 (0.591 x 0.118)	LW110 ¹⁾	1	0.100 (0.220)
PST85 ...142	10.5 (0.0163)	17.5 x 5 (0.689 x 0.197)	LW185 ¹⁾	1	0.250 (0.551)
PST175 ...300	10.5 (0.0163)	20 x 5 (0.787 x 0.197)	LW300 ¹⁾	1	0.450 (0.992)
PSTB370...470	10.5 (0.0163)	25 x 5 (0.984 x 0.197)	LW460	1	0.730 (1.609)
PSTB570...1050	13 (0.0202)	40 x 6 (1.575 x 0.236)	LW750	1	1.230 (2.712)

Terminal nut washer

For softstarter type	Req. qty	Part number	Pack ^{ing} piece	Weight kg (lb) 1 piece
PST85...142	1	LE185 ¹⁾	2	0.200 (0.441)
PST175...300	3	LE300 ²⁾	2	0.300 (0.661)
PSTB370...470	6	LE460	6	0.600 (1.323)
PSTB570...1050	6	LE750	6	0.750 (1.653)

Terminal shrouds

For softstarter type	Suitable for	Req. qty	Part number	Pack ^{ing} piece	Weight kg (lb) 1 piece
PST85...142	Compression lugs and cable connectors	1 pc and	LT185-AL	2	0.220 (0.485)
		1 pc	LT460-AL	2	0.800 (1.764)
PST175...300	Compression lugs and cable connectors	3 pcs	LT300-AL ^{2) 3)}	2	0.280 (0.617)
PSTB370...470	Compression lugs and cable connectors	2 pcs	LT460-AL	2	0.800 (1.764)
PSTB570...1050	Compression lugs and cable connectors	2 pcs	LT750-AL	2	0.825 (1.819)

External keypad including a 3m cable

For softstarter type	Part number	Pack ^{ing} piece	Weight kg (lb) 1 piece
PST30...300	PSTEK	1	0.400 (0.882)
PSTB370...1050			

Marine Kit


For softstarter type	Part number	Pack ^{ing} piece	Weight kg (lb) 1 piece
PST85...142	PSLM-2	1	0.240 (0.529)

Fieldbus plug - ABB Filedbus Plug suitable for all sizes. See page 38-41


¹⁾ Only fits on the motor side.

²⁾ Use two sets of the accessories on the line side and one set on the motor side.

³⁾ The LT300-AL is not compatible with PSLK-300/2 cable connector.

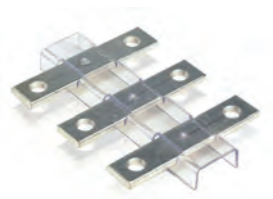

LX...

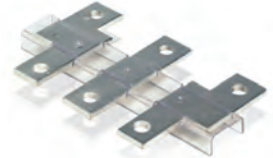

LW...



LE185




LE460



LT ... -AL



PSTEK

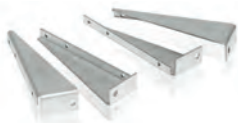

PSLM-2

PST(B) – The advanced range

Technical data

Rated insulation voltage U_i	690 V	
Rated operational voltage U_e	208...600 V, 400...690 V + 10 % / - 15 % 50/60 Hz $\pm 5\%$	
Rated control supply voltage U_s	100...250 V +10% / -15% 50/60 Hz $\pm 5\%$	
Rated control circuit voltage U_c	Internal or external 24 V DC	
Starting capacity at I_r	3 x I_e for 15 sec.	
Number of starts per hour	PST30...300 30 ¹⁾	PSTB370...1050 10 ¹⁾
Overload capability		
Overload class	10	
Service factor	PST(B)30...840 115 %	PSTB1050 100 %
Ambient temperature		
during operation	$\pm 0 \dots +50 \text{ }^\circ\text{C}$ (32 to 122 $^\circ\text{F}$) ²⁾	
during storage	$-25 \dots +70 \text{ }^\circ\text{C}$ (-13 to 158 $^\circ\text{F}$)	
Maximum altitude	4000 m ³⁾	
Degree of protection	PST30...72 IP10	PST85...PSTB1050 IP00
main circuit		
Supply and control circuit	IP20	
Main circuit	PST30...300	PSTB370...1050
Built-in By-pass contactor	No	Yes
Cooling system - Fan cooled	Yes (thermostat controlled)	
HMI for settings (Human Machine Interface)		
Display	Full text	
Languages	English, German, Italian, Dutch, Chinese, Finnish, Swedish, French, Spanish, Russian, Portugese, Turkish, Polish and Czech	
Keypad	2 selection keys and 2 navigating keys	
Signal relays		
Number of programmable signal relays	3 (each relay can be programmed to be Run, By-pass or Event signal)	
K4	Default as Run signal	
K5	Default as TOR (By-pass) signal	
K6	Default as Event signal	
Rated operational voltage, U_e	250 V AC / 24 V DC	
Rated thermal current I_{th}	5 A	
Rated operational current I_e at AC-15 ($U_e=250$ V)	1.5 A	
Analog output		
Output signal reference	0 ... 10 V, 0 ... 20 mA, 4 ... 20 mA	
Type of output signal	I Amp, U Volt, P kW, P hp, Q kVar, S kVA, TmpMot, TmpSCR, cosPhi	

¹⁾ Valid for 50 % on time and 50 % off time. $3.5 \times I_e$ for 7 sec., if other data is required, contact your sales office.

²⁾ Above 40 $^\circ\text{C}$ (104 $^\circ\text{F}$) up to max. 50 $^\circ\text{C}$ (122 $^\circ\text{F}$) reduce the rated current with 0.8 % per $^\circ\text{C}$ (0.44 % per $^\circ\text{F}$).

³⁾ When used at high altitudes above 1000 meters (3281 ft) up to 4000 meters (13123 ft) you need to derate the rated current using the following formula.

$$\left[\% \text{ of } I_e = 100 - \frac{x - 1000}{150} \right] \quad x = \text{actual altitude for the softstarter in meter}$$

$$\left[\% \text{ of } I_e = 100 - \frac{x - 3280}{497} \right] \quad x = \text{actual altitude for the softstarter in feet}$$

Control circuit	
Number of inputs	2 (start, stop)
Number of additional programmable inputs	2 (Each input can be programmed to be either: Non, Reset, Enable, Jog, DOL- On, Start motor 2, Start motor 3 or FB-Dis)

Signalling indication LED	
Power on	Green
Fault	Red
Protection	Yellow

Protections	
Electronic overload	Yes (Class 10A, 10, 20, 30)
Dual overload	Yes (separate overload function for start and run)
PTC connection	Yes
Locked rotor protection	Yes (Level and delay adjustable)
Underload protection	Yes (Level and delay adjustable)
Phase imbalance	Yes (Level and delay adjustable)
High current ($8 \times I_e$)	Yes
Phase reversal protection	Yes

Warnings (pre-warning)	
High current	Yes (Level and delay adjustable)
Low current (underload)	Yes (Level and delay adjustable)
Overload trip	Yes (Level and delay adjustable)
Overtemp, thyristor (SCR)	Yes

Start of several motors	
Possible to set-up and start three different motors	Yes (Different parameter sets)

Field bus connection	
Connection for ABB FieldBusPlug	Yes

PTC input	
Switch off resistance	2825 ohm $\pm 20\%$
Switch on resistance	1200 ohm $\pm 20\%$

External keypad	
Display	LCD type
Ambient temperature	
During operation	$\pm 0 \dots +50 \text{ }^\circ\text{C}$ (32 to 122 $^\circ\text{F}$)
During storage	$-25 \dots +70 \text{ }^\circ\text{C}$ (-13 to 158 $^\circ\text{F}$)
Degree of protection	IP66

PSTB Integrated by-pass ratings

Softstarter	PSTB370	PSTB470	PSTB570	PSTB720	PSTB840	PSTB1050
Integrated contactor	AF300		AF460	AF580	AF750	
AC-3 rating (A)	305		460	580	750	

PST(B) – The advanced range

Technical data

Major possible settings and the displayed text and the set default values

Description	Text on display	Values on display	Default value
Setting current for overload, locked rotor etc.	Setting I_L	9.0 ... 1207 A divided into 19 overlapping ranges.	See table, page 37
Time for start ramp	Start Ramp	1 ... 30 s, 1 ... 120 s (Range depends on Start Range)	10 s
Time for stop ramp	Stop Ramp	0 ... 30 s, 0 ... 120 s (Range depends on Stop Range)	0 s
Initial voltage for start ramp	Init Volt	30 ... 70 %	30 %
End voltage for stop ramp	End Volt	30 ... 70 %	30 %
Step down voltage	Step Down	30 ... 100 %	100 %
Level of the current limit.	Current Lim	1.5 ... 7.0 x I_L	4.0 x I_L
Selection of Kick start	Kick Start	Yes, No	No
Level of Kick start if selected	Kick Level	50 ... 100 %	50 %
Time for Kick start if selected	Kick Time	0.1 ... 1.5 s	0.2
Selectable range for start ramp	Start Range	1 ... 30 s, 1 ... 120 s	1 ... 30 s
Selectable range for stop ramp	Stop Range	0 ... 30 s, 0 ... 120 s	0 ... 30 s
Overload protection	Overload	No, Normal, Dual	Normal
Overload Class	OL Class	10 A, 10, 20, 30	10
Overload Class, Dual type, Start Class	OL Class S	10A, 10, 20, 30	10
Overload Class, Dual type, Run Class	OL Class R	10A, 10, 20, 30	10
Type of operation for overload protection	OL Op	Stop-M, Stop-A, Ind	Stop-M
Locked rotor protection	Locked Rotor	Yes, No	No
Trip level for locked rotor protection	Lock R Lev	0.5 ... 8.0 x I_L	4.0 x I_L
Trip time for locked rotor protection	Lock R Time	0.2 ... 10 s	1.0 s
Type of operation for locked rotor protection	Lock R Op	Stop-M, Stop-A, Ind	Stop-M
Underload protection	Underload	Yes, No	No
Trip level for Underload protection	Underl Lev	0.4 ... 0.8 x I_L	0.5 x I_L
Trip time for Underload protection	Underl Time	1 ... 30 s	10 s
Type of operation for Underload protection	Underl Op	Stop-M, Stop-A, Ind	Stop-M
Phase imbalance protection	Phase Imb	Yes, No	No
Trip level for phase imbalance protection	Ph Imb Lev	10 ... 80 %	80 %
Type of operation for phase imbalance protection	Ph Imb Op	Stop-M, Stop-A, Ind	Stop-M
High current protection	High I	Yes, No	No
Type of operation for high current protection	High I Op	Stop-M, Stop-A, Ind	Stop-M
Phase reversal protection	Phase Rev	Yes, No	No
Type of operation for phase reversal protection	Ph Rev Op	Stop-M, Stop-A, Ind	Stop-M
PTC protection	PTC	Yes, No	No
Type of operation for PTC protection	PTC Op	Stop-M, Stop-A	Stop-M
An external Bypass contactor is used	Ext ByPass	Yes, No	No
High current warning	Warn I=High	Yes, No	No
Trip level for high current warning	Wa I=H Lev	0.5 ... 5.0 x I_L	1.2 x I_L
Low current warning	Warn I=Low	Yes, No	No
Trip level for low current warning	Wa I=L Lev	0.4 ... 1.0 x I_L	0.8 x I_L
Overload warning	Warn OL	Yes, No	No
Trip level for overload warning	Wa OL Lev	40 ... 99 %	90 %
Thyristor overload warning	Warn SCR OL	Yes, No	No
Type of operation for phase loss fault	Ph Loss Op	Stop-M, Stop-A	Stop-M
Type of operation for by-pass doesn't close	BP open Op	Stop-M, Stop-A	Stop-M
Type of operation for by-pass doesn't open	BP closed Op	Stop-M, Stop-A	Stop-M
Type of operation for fieldbus fault	FB Fault Op	Stop-M, Stop-A	Stop-M
Type of operation for frequency fault	Freq F Op	Stop-M, Stop-A	Stop-M
Type of operation for heat sink over temperature fault	HS Temp Op	Stop-M, Stop-A	Stop-M
Type of operation for thyristor short circuit fault	SCR SC Op	Stop-M, Stop-A	Stop-M
Function of programmable input In_0	In0	None, Reset, Enable, Jog, DOL, Start 2, FB-Dis	Reset
Function of programmable input In_1	In1	None, Reset, Enable, Jog, DOL, Start 3, FB-Dis	Reset
Function of programmable relay output K4	Relay K4	Run, TOR, Event	Run
Function of programmable relay output K5	Relay K5	Run, TOR, Event	TOR
Function of programmable relay output K6	Relay K6	Run, TOR, Event	Event
Control of the softstarter with fieldbus	Fieldb Ctrl	Yes, No	No
Number of sequences for sequence start.	No of Seq	No, 2, 3	No
Language to use on display	Language	US/UK, FI, SE, PT, NL, IT, FR, ES, DE, CN, RU, TR, PL, CZ	US/UK


PST(B) – The advanced range

Technical data

Description	Text on display	Values on display	Default value
Password for display	Password	No, 1 ... 255	
Start mode	Start Mode	Volt, Torque	Volt
Stop mode	Stop Mode	Volt, Torque	Volt
Torque limit	Torque limit	20 ... 200 %	150 %
Analog output	Analogue Out	Yes, No	No
Analog output, reference	Anl Ref	0 ... 10 V, 0 ... 20 mA, 4 ... 20 mA	4 ... 20 mA
Analog output, type of value	Anl Type	I Amp, U Volt, P kW, P hp, Q kVAR, S kVA, TmpMot, TmpSCR, cosPhi	I Amp

Tripping curves for the integrated electronic overload protection

All units have an integrated electronic overload protection possible to set on four different tripping classes. Below you find a curve for each tripping class in cold state. These tripping curves are valid for PSE, PST and PSTB

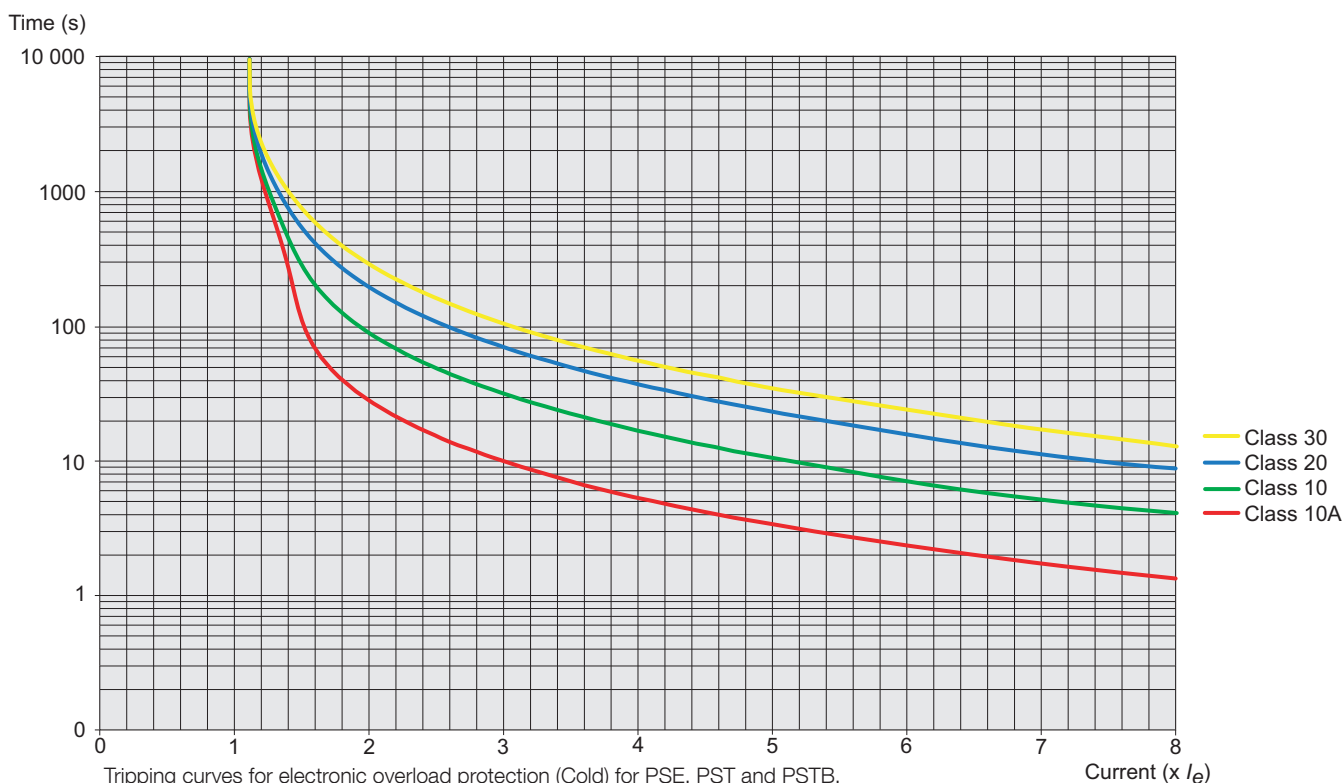



Tripping curves for electronic overload protection (Cold) for PSE, PST and PSTB.



PST(B) – The advanced range

Technical data

Cross section of connection cables

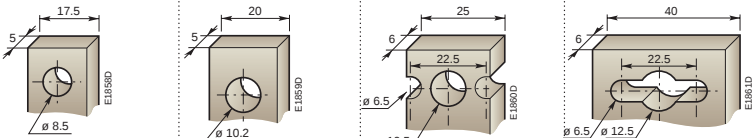		Softstarter PST30 ... 72	PST85 ... 142	PST175 ... 300	PSTB370 ... 470	PSTB570 ... 1050
Main circuit						
Available terminals:	L1, L2, L3	Yes	Yes	Yes	Yes	Yes
	T1, T2, T3	Yes	Yes	Yes	Yes	Yes
(For external by-pass)	B1, B2, B3	Yes	Yes	Yes	No	No
Connection clamp						
Solid/stranded	1 x mm ² (AWG)	10 ... 95 (8...3/0)	See accessories			
Solid/stranded	2 x mm ² (AWG)	6 ... 35 (10...2)	See accessories			
Tightening torque (recommended)	Nm (lb-in)	6.0 (53.10)	See accessories			
Connection bar						
Width and thickness	mm (in)	—	17.5 x 5 (0.689 x 0.197)	20 x 5 (0.787 x 0.197)	25 x 6 (0.984 x 0.236)	40 x 6 (1.575 x 0.236)
Hole diameter	mm (in)	—	8.5 (0.335)	10.2 (0.402)	10.5 (0.413)	6.5, 12.5 (0.256, 0.492)
Tightening torque (recommended)	Nm (lb-in)	—	18 (159.3)	28 (247.8)	35 (309.8)	45 (398.3)
Supply and control circuit						
Connection clamp	Yes					
Solid/stranded	1 x mm ² (AWG)	2.5 (14)				
Solid/stranded	2 x mm ² (AWG)	1.5 (16)				
Tightening torque (recommended)	Nm (lb-in)	0.5 (4.43)				

PST(B) – The advanced range

Technical data

Fuse ratings and power losses

For Softstarter Type	Recommended ABB Overload protection		Max power loss at rated I _e		Max semi-conductor fuse rating - main circuit Coordination type 2 (65 kA) ³⁾ Bussman Fuses, DIN43 620			Supply circuit power requirements ¹⁾ VA/VA pull in
	Type	Current range A	without by-pass ²⁾	with by-pass	A	Type	Size	
			W	W				
PST								
PST30	Integrated	9...35	100	9.5	80	170M1566	000	5
PST37	Integrated	11...43	120	10.5	125	170M1568	000	5
PST44	Integrated	13...51	140	13.5	160	170M1569	000	5
PST50	Integrated	15...58	160	13.5	160	170M1569	000	5
PST60	Integrated	18...69	190	15.5	200	170M1570	000	5
PST72	Integrated	22...83	230	17	250	170M1571	000	5
PST85	Integrated	25...98	270	30.5	315	170M1572	000	10
PST105	Integrated	32...120	325	35	400	170M3819	1	10
PST142	Integrated	43...163	435	37	450	170M5809	2	10
PST175	Integrated	53...201	540	62	500	170M5810	2	15
PST210	Integrated	63...241	645	67	630	170M5812	2	15
PST250	Integrated	75...288	765	67	700	170M5813	2	15
PST300	Integrated	90...345	920	90	900	170M6813	3	15
PSTB 600 V								
PSTB370	Integrated	111...425	N/A	90	700	170M5813	2	20/480
PSTB470	Integrated	141...540	N/A	110	900	170M6813	3	20/480
PSTB570	Integrated	171...655	N/A	105	900	170M6813	3	25/900
PSTB720	Integrated	216...828	N/A	110	1250	170M8554	3	25/860
PSTB840	Integrated	252...966	N/A	170	1500	170M8556	3	25/860
PSTB1050	Integrated	315...1207	N/A	170	1800	170M8558	3	25/860
PSTB 690 V								
PSTB370	Integrated	111...425	N/A	90	700	170M5813	2	20/480
PSTB470	Integrated	141...540	N/A	110	900	170M6813	3	20/480
PSTB570	Integrated	171...655	N/A	105	900	170M6813	3	25/900
PSTB720	Integrated	216...828	N/A	110	1250	170M8554	3	25/860
PSTB840	Integrated	252...966	N/A	170	1500	170M8556	3	25/860
PSTB1050	Integrated	315...1207	N/A	170	1600	170M8557	3	25/860

¹⁾ For the supply circuit use a maximum 6 A time-delay fuse or an MCB with type C characteristics.

²⁾ Calculated power loss at operational current (I_{op}) without by-pass.

P_{tot} = 3 x I_{op} + VA value
 Example: PST 60 running at 52 A
 P_{tot} = 3 x 52 + 5 = 161 W

³⁾ Max fuse rating independent of In-Line or Inside Delta connection. In Inside Delta connections of PST, the fuses can be placed outside of the delta. For PSTB the fuses shall be placed inside the delta. Contact ABB for more information.

FBP FieldBusPlug

DeviceNet, MODBUS-RTU and CANopen, ordering details

DeviceNet FieldBusPlug

Ready-made DeviceNet fieldbus interface with various cable lengths.

- Applicable on all FBP motor starters and other devices
- Degree of protection IP65, diagnostic LED



Designation	Cable length	Type	Part number	Pack ^{ing} piece	Weight kg (lb) 1 piece
DeviceNet-FBP	0.25 m (0.82 ft)	DNP21-FBP.025	1SAJ 230 000 R1003	1	0.09 (0.198)
DeviceNet-FBP	0.50 m (1.64 ft)	DNP21-FBP.050	1SAJ 230 000 R1005	1	0.10 (0.220)
DeviceNet-FBP	1.00 m (3.28 ft)	DNP21-FBP.100	1SAJ 230 000 R1010	1	0.13 (0.287)
DeviceNet-FBP	5.00 m (16.40 ft)	DNP21-FBP.500	1SAJ 230 000 R1050	1	0.36 (0.794)



DNP21-FBP
MRP21-FBP
COP21-FBP

MODBUS-RTU FieldBusPlug

Ready-made MODBUS-RTU fieldbus interface with various cable lengths.

- Applicable on all FBP motor starters and other devices
- Degree of protection IP65, diagnostic LED

Designation	Cable length	Type	Part number	Pack ^{ing} piece	Weight kg (lb) 1 piece
MODBUS-RTU-FBP	0.25 m (0.82 ft)	MRP21-FBP.025	1SAJ 250 000 R0003	1	0.09 (0.198)
MODBUS-RTU-FBP	0.50 m (1.64 ft)	MRP21-FBP.050	1SAJ 250 000 R0005	1	0.10 (0.220)
MODBUS-RTU-FBP	1.00 m (3.28 ft)	MRP21-FBP.100	1SAJ 250 000 R0010	1	0.13 (0.287)
MODBUS-RTU-FBP	5.00 m (16.40 ft)	MRP21-FBP.500	1SAJ 250 000 R0050	1	0.36 (0.794)

CANopen FieldBusPlug

Ready-made CANopen fieldbus interface with various cable lengths.

- Applicable on all FBP motor starters and other devices
- Degree of protection IP65, diagnostic LED

Designation	Cable length	Type	Part number	Pack ^{ing} piece	Weight kg (lb) 1 piece
CANopen-FBP	0.25 m (0.82 ft)	COP21-FBP.025	1SAJ 230 100 R1003	1	0.09 (0.198)
CANopen-FBP	0.50 m (1.64 ft)	COP21-FBP.050	1SAJ 230 100 R1005	1	0.10 (0.220)
CANopen-FBP	1.00 m (3.28 ft)	COP21-FBP.100	1SAJ 230 100 R1010	1	0.13 (0.287)

To connect the PST Softstarter to a DeviceNet or CANopen fieldbus system...

you need specific software for PLC set-up, (EDS file) which is available at www.abb.com/lowvoltage on the Softstarter pages. Look under the documentation-link named Software. If you need help or advice, please contact your local ABB office.

FBP FieldBusPlug

DeviceNet, MODBUS-RTU and CANopen accessories, ordering details

Accessories for the DeviceNet, MODBUS-RTU and CANopen bus connector



DNF11-FBP.050



DNM11-FBP.050

DeviceNet, MODBUS-RTU and CANopen round cable for bus junctions

Ready-made bus cable with an M12 connector and an open cable end.

Designation	Cable length	Type	Part number	Pack ^{ing} piece	Weight kg (lb) 1 piece
Round cable with female connector	0.50 m (1.64 ft)	DNF11-FBP.050	1SAJ 923 002 R0005	1	0.04 (0.088)
Round cable with male connector	0.50 m (1.64 ft)	DNM11-FBP.050	1SAJ 923 003 R0005	1	0.04 (0.088)



DNX11-FDP

DeviceNet, MODBUS-RTU and CANopen round cable for bus extension

Ready-made bus cable with M12 male and female connectors

Designation	Cable length	Type	Part number	Pack ^{ing} piece	Weight kg (lb) 1 piece
Extension cable	1.00 m (3.28 ft)	DNX11-FBP.100	1SAJ 923 001 R0010	1	0.08 (0.176)
Extension cable	3.00 m (9.84 ft)	DNX11-FBP.300	1SAJ 923 001 R0030	1	0.20 (0.441)
Extension cable	5.00 m (16.40 ft)	DNX11-FBP.500	1SAJ 923 001 R0050	1	0.31 (0.683)
Round cable	100.00 m (328 ft)	DNC11-FBP.999	1SAJ 923 004 R1000	1	5.60 (12.346)



DNM11-FBP.0

DNF11-FBP.0



DNR11-FBP.120

DeviceNet, MODBUS-RTU and CANopen round cable connectors

Bus cable and coupling accessories

Designation	Type	Part number	Pack ^{ing} piece	Weight kg (lb) 1 piece
Male connector for round cable	DNM11-FBP.0	1SAJ 923 005 R0001	5	0.15 (0.331)
Female connector for round cable	DNF11-FBP.0	1SAJ 923 006 R0001	5	0.15 (0.331)

DeviceNet, MODBUS-RTU and CANopen termination resistor

Designation	Type	Part number	Pack ^{ing} piece	Weight kg (lb) 1 piece
Termination Resistor, 120 Ohm	DNR11-FBP.120	1SAJ 923 007 R0001	1	0.02 (0.044)

FBP FieldBusPlug

Profibus DP, ordering details



PDP22-FBP

Profibus DP FieldBusPlug

Ready-made Profibus DP fieldbus interface with various cable lengths.

- Supports PROFIBUS DP V0 and V1
- Applicable on all FBP motor starters and other devices
- Degree of protection IP65, diagnostic LED



Designation	Cable length	Type	Part number	Pack ^{ing} piece	Weight kg (lb) 1 piece
Profibus DP FBP	0.25 m (0.82 ft)	PDP22-FBP.025	1SAJ 240 100 R1003	1	0.09 (0.198)
Profibus DP FBP	0.50 m (1.64 ft)	PDP22-FBP.050	1SAJ 240 100 R1005	1	0.10 (0.220)
Profibus DP FBP	1.00 m (3.28 ft)	PDP22-FBP.100	1SAJ 240 100 R1010	1	0.13 (0.287)
Profibus DP FBP	2.00 m (6.56 ft)	PDP22-FBP.200	1SAJ 240 100 R1020	1	0.20 (0.441)
Profibus DP FBP	5.00 m (16.40 ft)	PDP22-FBP.500	1SAJ 240 100 R1050	1	0.36 (0.794)



PDQ22-FBP

Profibus DP FieldBusPlug for 4 devices

PDQ22 is a member of the ABB FieldBusPlug family of bus connectors. It allows the connection of up to four devices to Profibus DP by just using one Profibus node access. This allows a cost efficient device integration for devices that are located physically nearby. PDQ22 supports DP-V0 and DP-V1. The degree of protection is IP66. There are separate diagnosis LEDs for bus and device status.

Note that the accessory PDQ22-FBP only works with the PSR and PSE and not with the PST(B) softstarter.

Designation	Type	Part number	Pack ^{ing} piece	Weight kg (lb) 1 piece
Quadruple bus connector	PDQ22-FBP	1SAJ 240 200 R0050	1	0.20 (0.441)
DINrail adapter for PDQ22-FBP	CDA11-FBP. 0	1SAJ 929 300 R0001	1	0.11 (0.243)
Fixing bracket for passive plug of connection cable	CDP11-FBP.0	1SAJ 929 100 R0001	1	0.50 (1.102)



Configuration software

This cable and software can be used for set-up and commissioning of the softstarter as well as to keep back-up of the parameter settings.

Designation	Type	Part number	Pack ^{ing} piece	Weight kg (lb) 1 piece
USB to FBP interface cable	UTF21-FBP	1SAJ 929 400 R0002	1	
PDP22/PDQ22 Device Type Manager (DTM) incl. FDT/DTM frame application	PBDTM-FBP	1SAJ 924 012 R0003	1	

To connect the PST Softstarter to a Profibus DP fieldbus system...

you need specific software for PLC set-up, (GSD file) which is available at www.abb.com/lowvoltage on the Softstarter pages. Look under the documentation-link named Software. If you need help or advice, please contact your local ABB office.

PDP21 is replaced by PDP22.

Use PDP22 with the GSD-file Abb_082d.gsd regardless if the PLC is a DP/V0 or DP/V1.

FBP FieldBusPlug

Profibus DP accessories, ordering details



Accessories for the Profibus DP Bus Connector

Profibus DP Round Cable for Bus Junctions

Ready-made bus cable with an M12 connector and an open cable end.

- Application on bus junctions such as e.g. Profibus DB couplers or devices with an integrated Profibus DB interface



PDF11-FBP.050



PDM11-FBP.050

Designation	Cable length	Type	Part number	Pack ^{ing} piece	Weight kg (lb) 1 piece
Round Cable with female connector	0.50 m (1.64 ft)	PDF11-FBP.050	1SAJ 924 002 R0005	1	0.04 (0.088)
Round Cable with male connector	0.50 m (1.64 ft)	PDM11-FBP.050	1SAJ 924 003 R0005	1	0.04 (0.088)

Profibus DP Round Cable for Bus Extension

Ready-made bus cable with M12 male and female connectors

Round cable on coil



PDX11-FBP

Designation	Cable length	Type	Part number	Pack ^{ing} piece	Weight kg (lb) 1 piece
Extension Cable	0.50 m (1.64 ft)	PDX11-FBP.050	1SAJ 924 001 R0005	1	0.04 (0.088)
Extension Cable	1.00 m (3.28 ft)	PDX11-FBP.100	1SAJ 924 001 R0010	1	0.08 (0.176)
Extension Cable	3.00 m (9.84 ft)	PDX11-FBP.300	1SAJ 924 001 R0030	1	0.20 (0.441)
Extension Cable	5.00 m (16.40 ft)	PDX11-FBP.500	1SAJ 924 001 R0050	1	0.31 (0.683)
Round Cable	100.00 m (328 ft)	PDC11-FBP.999	1SAJ 924 004 R1000	1	5.60 (12.346)

Profibus DP Accessories for Bus Extension

Designation	Type	Part number	Pack ^{ing} piece	Weight kg (lb) 1 piece
Male Connector for round cable	PDM11-FBP.0	1SAJ 924 005 R0001	5	0.03 (0.066)
Female Connector for round cable	PDF11-FBP.0	1SAJ 924 006 R0001	5	0.03 (0.066)

Profibus DP Termination Resistor, Miscellaneous Accessories

Designation	Type	Part number	Pack ^{ing} piece	Weight kg (lb) 1 piece
Termination Resistor, 150 Ohm	PDR11-FBP.150	1SAJ 924 007 R0001	1	0.03 (0.066)
Feeding connector 24V DC, Code B-A	PDV11-FBP.0	1SAJ 924 008 R0001	1	0.04 (0.088)
Feeding connector 24V DC, Code A-A	PDV12-FBP.0	1SAJ 924 011 R0001	1	0.04 (0.088)
Adaptor M12-Dsub9-M12 Cable length 0.50m	PDA11-FBP.050	1SAJ 924 009 R0005	1	0.04 (0.088)
Adaptor M12-Dsub9-M12 Cable length 2 x 0.50m	PDA12-FBP.050	1SAJ 924 010 R0005	1	0.04 (0.088)


Extension cable

Designation	Cable length	Type	Part number	Pack ^{ing} piece	Weight kg (lb) 1 piece
Extension cable (female/ male), shielded	0.3 m (0.98 ft)	CDP15-FBP.030	1SAJ 929 140 R0003	1	
Extension cable (female/ male), shielded	0.6 m (1.97 ft)	CDP15-FBP.060	1SAJ 929 140 R0006	1	
Extension cable (female/ male), shielded	1.5 m (4.92 ft)	CDP15-FBP.150	1SAJ 929 140 R0015	1	0.20 (0.441)
Extension cable (male/open), shielded	1.5 m (4.92 ft)	CDP16-FBP.150	1SAJ 929 150 R0015	1	0.20 (0.441)

Wall mounting instructions

Softstarters

Minimum distance to wall/front

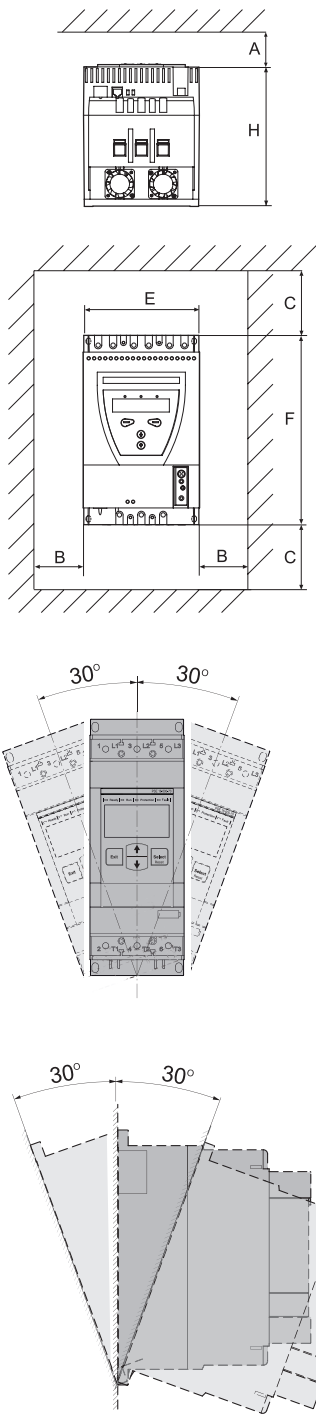


Dimensions (mm/in)

Softstarter	A	B	C	E	F	H
PSR						
PSR3 ... 16	25/0.984	0*	0	45/1.77	140/5.51	114/4.49
PSR25 ... 30	25/0.984	0*	0	45/1.77	160/6.30	128/5.04
PSR37 ... 45	25/0.984	0*	0	54/2.13	187/7.36	153/6.02
PSR60 ... 105	25/0.984	0*	0	70/2.76	220/8.66	180/7.09
PSE						
PSE18 ... 105	20/0.787	10/0.394	100/3.94	90/3.54	245/9.65	185.5/7.30
PSE142 ... 170	20/0.787	10/0.394	100/3.94	130/5.12	295/11.61	219.5/8.64
PSE210 ... 370	20/0.787	10/0.394	100/3.94	190/7.48	550/21.65	236.5/9.31
PST						
PST30 ... 72	20/0.787	10/0.394	100/3.94	160/6.30	260/10.24	196/7.72
PST85 ... 142	20/0.787	10/0.394	100/3.94	186/7.32	390/15.35	270/10.63
PST175 ... 300	20/0.787	10/0.394	100/3.94	360/14.17	420/16.54	270/10.63
PSTB						
PSTB370 ... 470	20/0.787	15/0.394	150/5.91	365/14.37	460/18.11	361/14.21
PSTB570 ... 1050	20/0.787	15/0.394	150/5.91	435/17.13	515/20.28	381/14.21

*) 5 mm/0.197 inch for the 24 V DC version

Dimensions

PSTEK

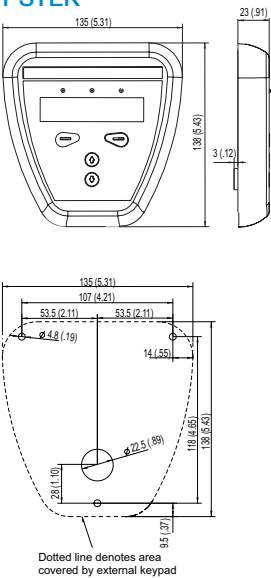


Dimensions in mm (and inches)

Dimensions in mm (and inches)


Dimensions

PSR softstarters


PSR3 ... 16

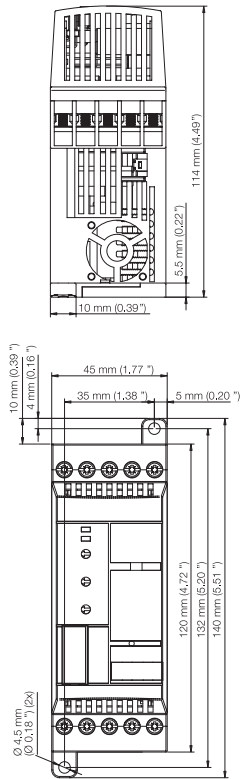


PSR25 ... 30

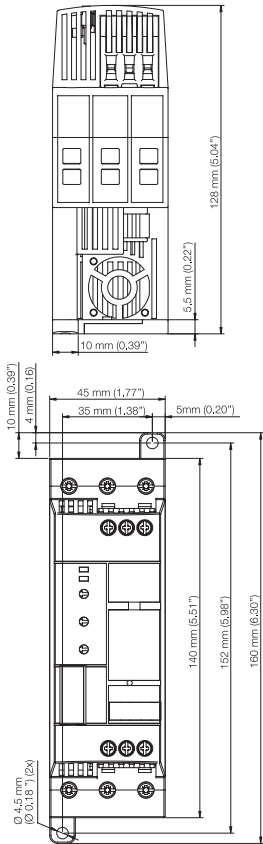

PSR37 ... 45

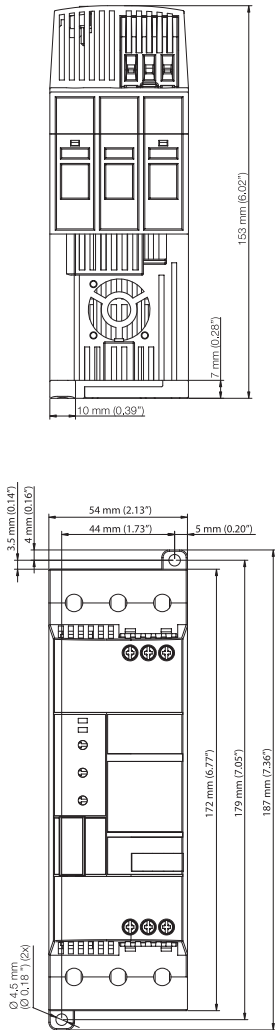

PSR60 ... 105

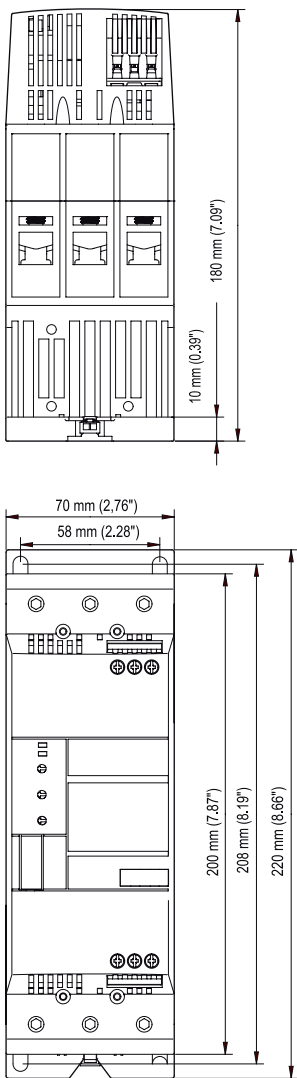


Dimensions in mm (and inches)

Dimensions

PSE softstarters


PSE18 ... 105

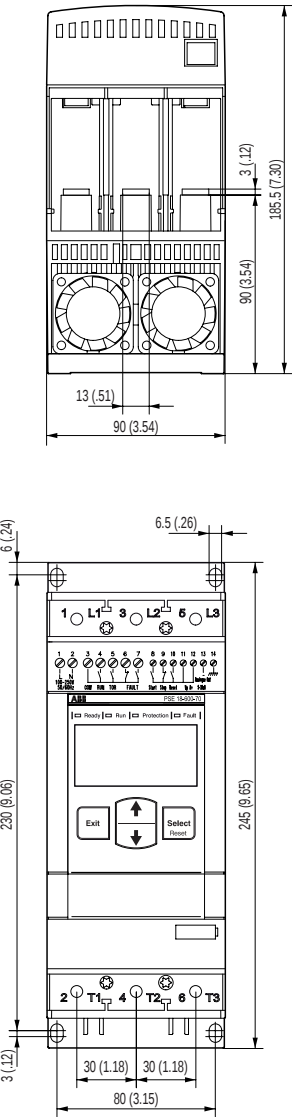


Dimensions

PST and PSTB softstarters


PST30 ... 72

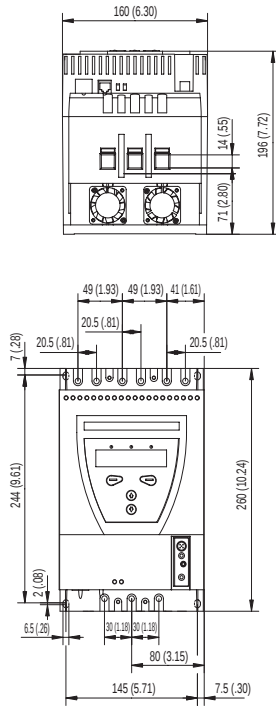


PST85 ...142

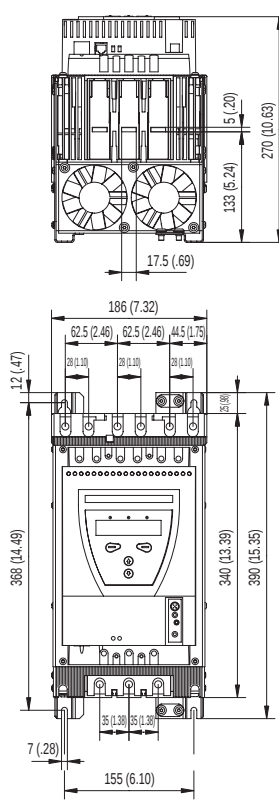


PST85 ...142 with marine kit

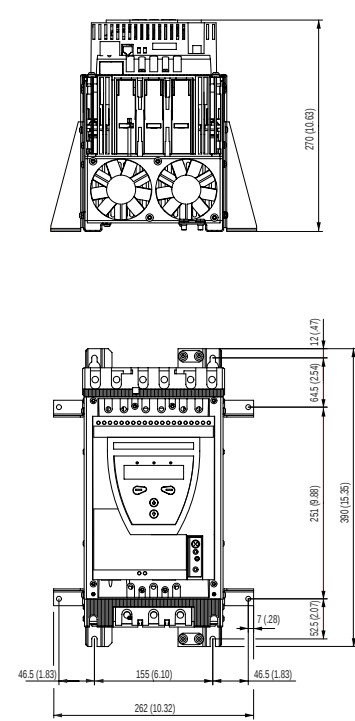


PST175 ... 300

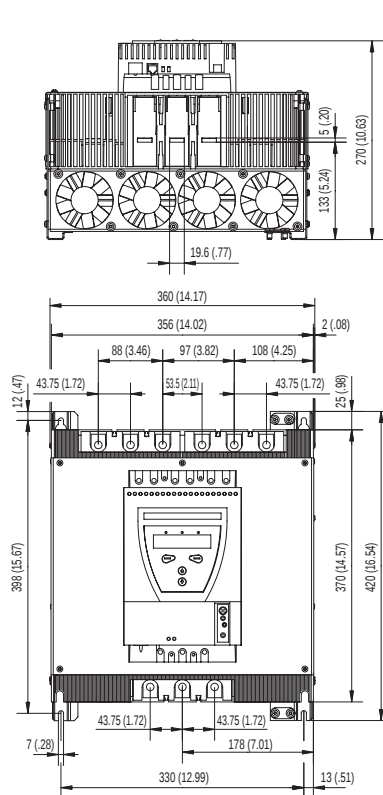

PSTB370 ... 470

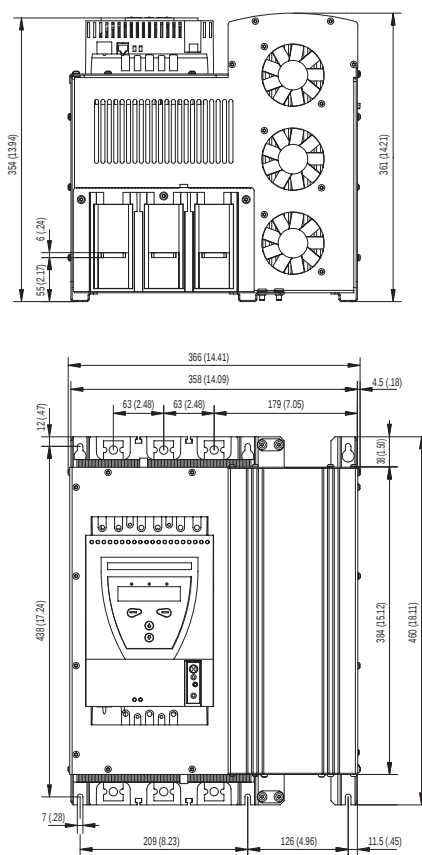

PSTB570 ... 1050

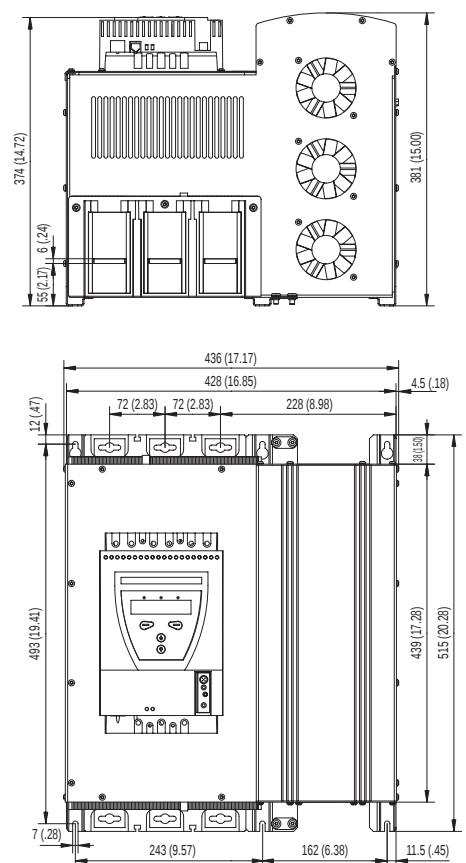


Dimensions in mm (and inches)

Circuit diagrams


PSR softstarters

PSR3 ...16


A) With MMS

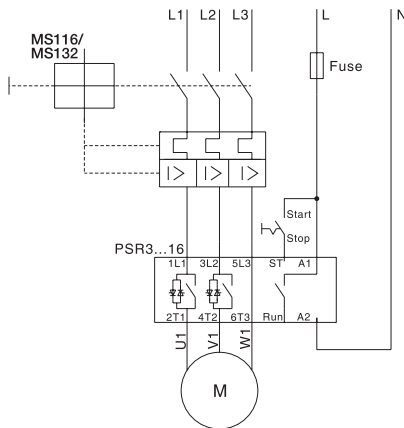

B) With MMS and auxiliary contact

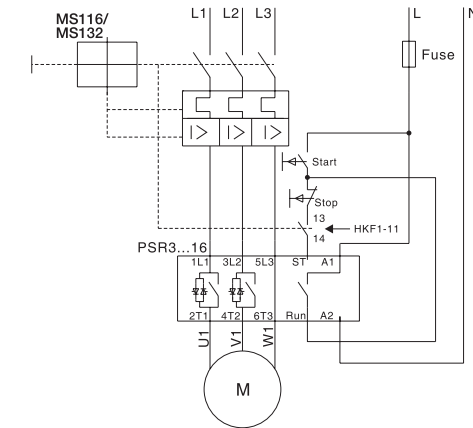


C) With fuses, contactor and O.L.

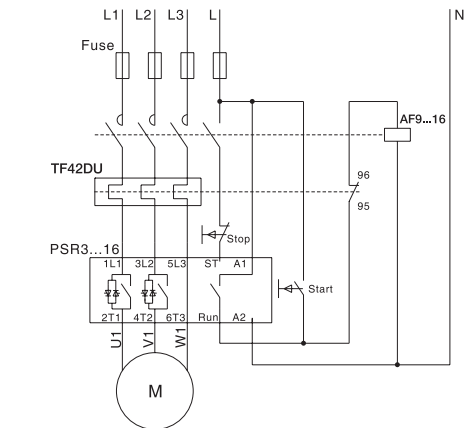


PSR25 ... 45


D) With MMS

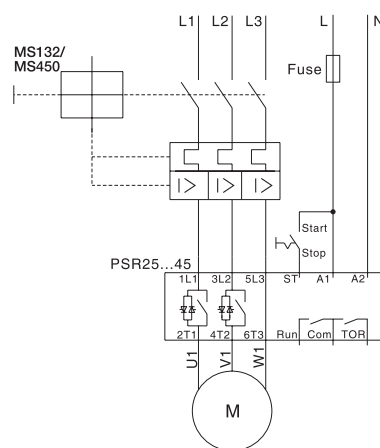

E) With MMS and auxiliary contact

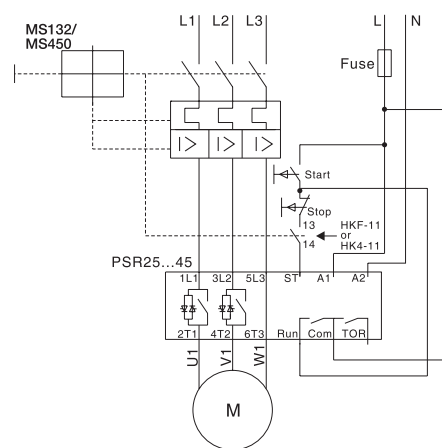


F) With fuses, contactor and O.L.

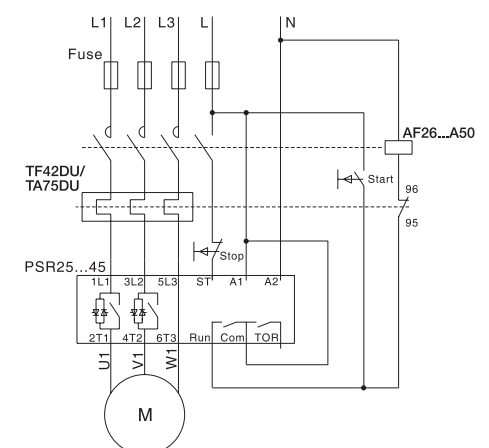


PSR60 ... 105


G) With MMS

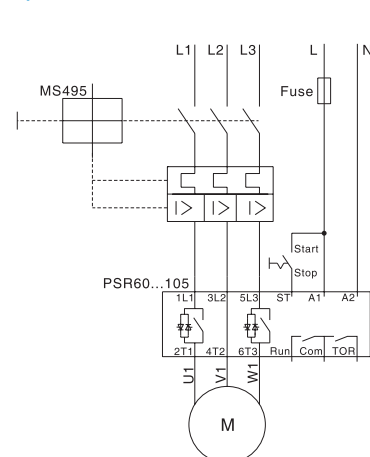

H) With MMS and auxiliary contact

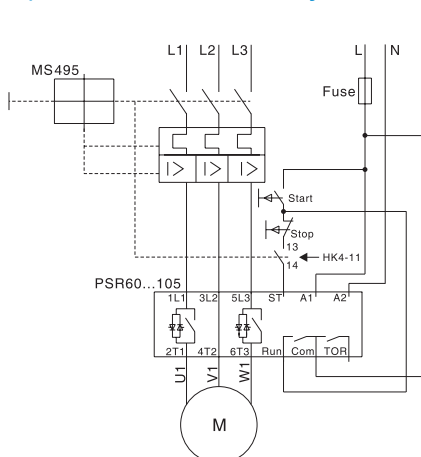



I) With fuses, contactor and O.L.

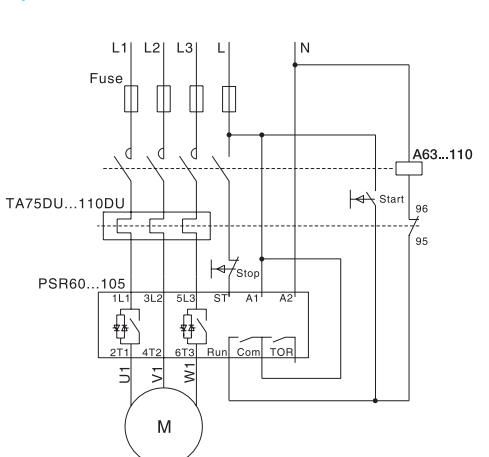

Circuit diagrams

PSE softstarters


PSE18 ... 370

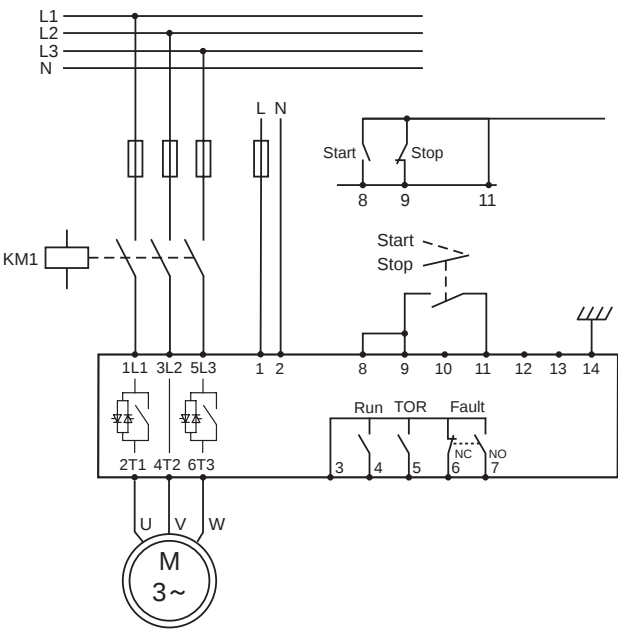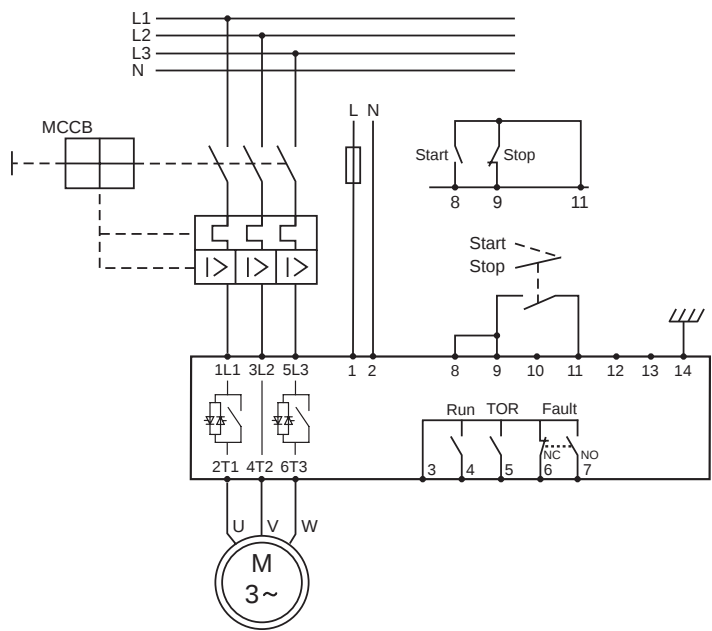


Circuit diagrams

PST and PSTB softstarters

PST30...300

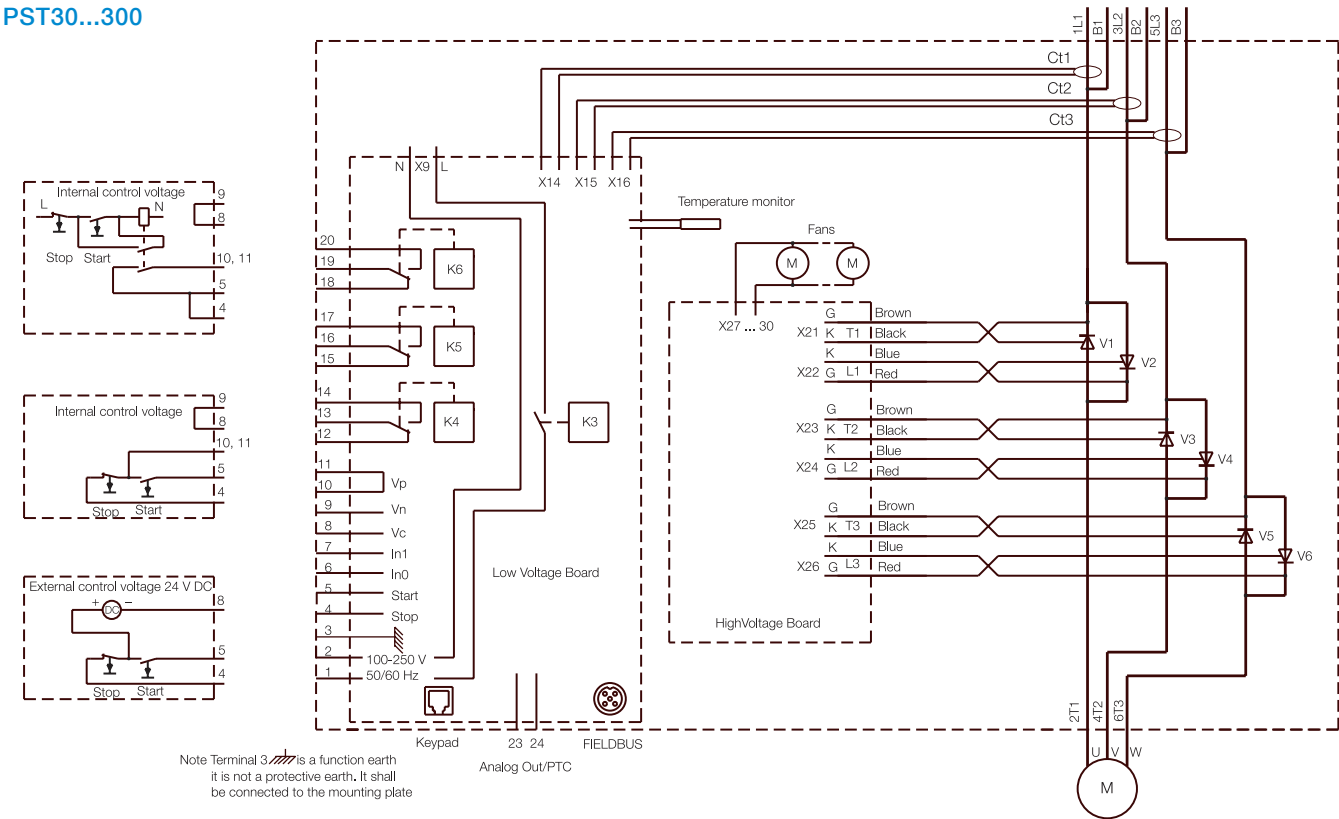

PSTB370...1050

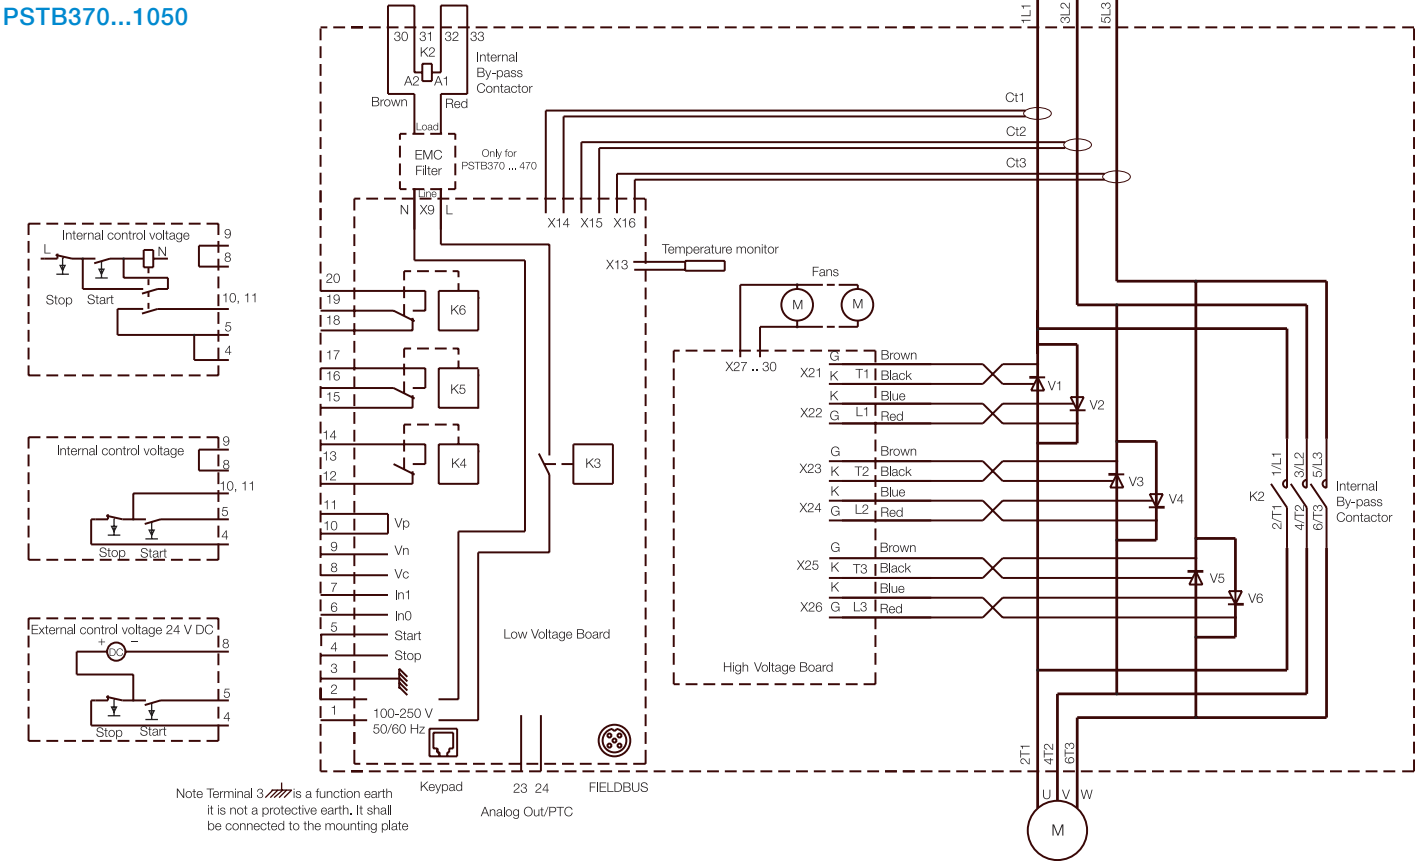


prosoft and marketing material

prosoft 5 - Softstarter selection tool

The selection of a softstarter can be done according to this catalog. This will work fine in the majority of cases but by using the softstarter selection tool prosoft, a more optimized selection will be achieved. Especially in extremely heavy duty applications with several minutes starting time, the use of prosoft is recommended.

When using prosoft, the selection is done in 3 steps, which can be seen as 3 different tabs in the program:


1. Input tab – Type in the general data and information about the motor and about the load. Try to use as accurate data as possible to get the most accurate results.
2. Calculation tab – Here it is possible to see how long the start will be depending on how high the current is. This tab will indicate which settings should be used and it might affect the selection.
3. The selection tab – Select which of the suggested softstarters to use. Here it is also possible to generate a report about the selection.

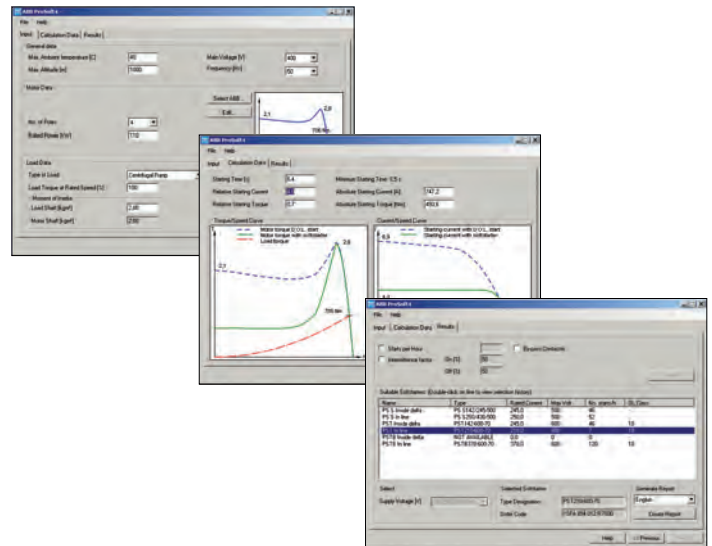

Marketing material available on www.abb.com/lowvoltage

The following material is a selection of all softstarter related material that is available on www.abb.com/lowvoltage. Just click on "Control Products", then "Softstarters".

- Product catalogs and brochures
- Certificates and approvals
- Circuit diagrams and application diagrams
- Dimension drawings (2D and 3D)
- Manuals
- eds- and gsd-files for fieldbus connection
- prosoft selection tool

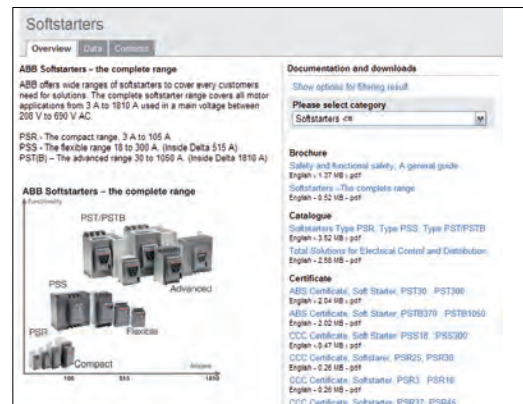

Certifications and approvals

The table below shows the approvals and certifications for different softstarters.

For approvals and/or certificates not listed below, please contact your local ABB sales office.

Certifications and approvals

Abbreviation Approved in	Certifications						Approvals: ship classification societies	
								
	CE EU	cULus Canada USA	CCC China	GOST Russia	ANCE Mexico	C-tick Australia	ABS American Bureau of Shipping	GL Germany
PSR3 ... PSR105	•	•	•	•	—	•	—	—
PSE18 ... PSE370	•	•	•	•	•	•	—	—
PST30 ... PSTB1050	•	•	•	•	•	•	•	•

• **Standard design approved**, the company labels bear the certification mark when this is required.

Directives and standards

No. 2006/95/EC

No. 2004/108/EC

EN 60947-1

EN 60947-4-2

UL 508

CSA C22.2 No 14

Contact us

ABB Inc.

Low Voltage Control Products
16250 W. Glendale Drive
New Berlin, WI 53151
Phone: 888-385-1221
Fax: 800-726-1441
USA Technical Support & Customer
Service:
888-385-1221, Option 4
7:30AM to 5:30PM, CST,
Monday - Friday
lvps.support@us.abb.com
Web: www.abb.us/lowvoltage

ABB Inc.

Low Voltage Products
2117, 32nd Avenue
Lachine, Quebec H8T 3J1
Tel.: 514 420 3100
Toll free: 800 567 0283
Canadian technical support:
lvps.support@ca.abb.com
Web: www.abb.ca/lowvoltage

©Copyright 2011 ABB. All rights reserved.
Specification subject to changes without notice.

1SXU132174C0202, November 2011